 


## **Revision History**

Date	Version	Revision
2/28/2018	2.01.01.23R8	Optimized calibration and PV process on the production line.
8/29/2017	2.01.01.23R7	Supported system recovery from U-disk.
		2. Fixed a bug which may cause the generator report a false
		over voltage alarm when start-up.
3/23/2017	2.01.01.23R3	1. Allow 0 Hz for CH Frequency In MOD Modes PM, AM,
		DSB-AM, ASK, PSK
		2. Allow MOD frequency > CH Frequency In MOD Modes
		PM, DSB AM, ASK
		3. Allow DSB-AM, AM MOD Modes In TrueArb Mode
		4. Up Followed by Down Sweep Mode is Supported in
		Linear Sweep (No Change for Log Sweep)
		<ol><li>Added ARB waveform name to display, allowing user to know what Arb waveform is loaded</li></ol>
		6. Fixed some bugs
		a) Arb Waveforms In DDS Mode Have One (Small)
		Glitch Per Cycle
		b) Built in Ramp waveform has a flat spot issue at the
		rising slope zero crossing right at the SYNC pulse.
		c) Power Up Last Does Not Remember
		SRate/Frequency Setting
		d) MOD Type = DSB AM Has Amplitude Issues
9/30/2016	2.01.01.22R5	1. Permit setting the frequency to 0. 0 Hz would mean that
		the DDS accumulated phase word would be held/not
		change with time.
		2. Fixed some bugs
		<ul> <li>a) Single Channel AM Modulation Output Amplitude Is</li> <li>9.3% Low</li> </ul>
		b) Manual trigger can not trigger both channels at the
		same time
		c) SW bug regarding the modulation with noise
		d) Frequency Coupling/Phase Lock Does Not Work in
		TrueArb
		e) Instrument Powers Up With Wrong Waveforms
		f) TrueArb mode CH Coupling Bug When Entering
		Samples/Sec
		g) Display graphic error for displayed wave shape
		h) Can not save the last state after the update
6/16/2016	2.01.01.21R2	1. Added Waveform Combination function, to support
		combining ch1 and ch2 from internal to generate
		complex signals such as sine + noise and two-tone.
		The set path: Utility   Output Setup   Wave Combine



Date	Version	Rev	vision
		2.	Added mode selection: "Pase-Locked" and
			"Independent" . In "Pase-Locked" mode the
			generator resets both channels every time the frequency
			is changed to maintain synchronization automatically. In
			"Independent" mode the generator will not reset any
			channel when the frequency is changed; the phase
			difference between channels is random.
		2	The set path: Utility   mode
		3.	Fixed some bugs
			<ul><li>i) Can not delete files with illegal characters</li><li>j) In burst mode, press the soft key for cycles, it</li></ul>
			j) In burst mode, press the soft key for cycles, it changes to infinite right off the bat
			k) External modulation input inverted compared to
			convention
			Can not remember the clock source setting
			m) Some unexpected glitches when enabling the
			output or change the parameters
1/16/2016	2.01.01.17R5	1.	Added statistic function in counter mode
	NOTE: After	2.	Supported using method 2 from our "generating
	being updated		mulitphase waveforms" application note (refer to
	to this release,		http://www.siglentamerica.com/prodcut-pxzl.aspx?id=9
	the generator		0&tid=16&T=2) to synchronize 2 units of SDG2000X
	cannot be	3.	Fixed some bugs
	backward to		n) A bug in file system could cause the generator
	previous		never startup
	releases any		o) DHCP does not run at power up
	more		p) Channel lock phase can be wrong in modulation
			sometimes
			q) Error in calculation of frequency deviation in
			counter mode
			r) Instrument does not allow CH1 and CH2 to both use
			the external input for the modulation source
			simultaneously in tracking mode
			s) Downward compatibility of .xml state file
			t) Unable to delete files with uncommon character(s) in their names
11/30/2015	2.01.01.16R2	1.	
11/30/2013	Z.UI.UI.IUNZ	1. 2.	Added phase deviation option in channel tracking mode Optimized the User Interface, including save/recall, arb,
		۷.	etc.
		3.	Supported long pressing the Output key to switch the
		٥.	load between 50ohm and HiZ
		4.	Supported to autosave the imported binary file (*.bin).
		5.	Fixed some bugs
		٠.	



Date	Version	Revision
		a) Unexpected change on Phase difference between
		channels in sweep mode when switching the style
		between linear and log
		b) Channels not aligned when the frequency of one
		channel is integral multiple of another
		c) Wrong sweep profile when using manual trigger
		<ul> <li>d) Unexpected reset on output when setting illegal parameters</li> </ul>
		e) Unstable waveform at the beginning of after enabling the output
		f) Display error when switching between TrueArb and DDS in Arb mode
		g) Frequency deviation display problem in Counter mode
		h) Wrong project name in system information
		i) When pressing the waveform button, the parameter button flashes
		j) Unable to set variable load value without touch screen
		k) Unexpected digit jumping when setting parameters with the knob
		I) Set CH2 to invert and then do a system -> default,
		the option will return to "normal", but the signal
		will stay inverted.
9/30/2015	2.01.01.15R2	Supported adjustable noise bandwidth
		2. Supported harmonic
		3. Added some built-in arbs, so the number of arb types
		increased to 196
		4. Fixed some bugs
8/27/2015	2.01.01.12R1	The first formal release



## **Compatibility between Versions**

Source	Object	Compatibility	
Version	Version		
2.01.01.23R7	2.01.01.23R8	Tested.	
2.01.01.23R5	2.01.01.23R8	Tested.	
2.01.01.23R3	2.01.01.23R8	Tested.	
2.01.01.22R5	2.01.01.23R8	Tested.	
2.01.01.21R2	2.01.01.23R8	Tested.	
2.01.01.17R5	2.01.01.23R8	Tested.	
2.01.01.16R2	2.01.01.23R8	Not Tested	
2.01.01.15R2	2.01.01.23R8	Not Tested	
2.01.01.12R1	2.01.01.23R8	Not Tested	




## **Update Instructions**

## WARNING: DO NOT shut off the instrument until the update is completed.

1. Copy the update file (\*.ads) to a FLASH type U-disk, and then connect the U-disk to the USB host port of the instrument.




2. Press the Utility key on the front panel, and then softkey "System ->Page 1/2 -> Firmware Update", to enter the interface of the file browser.

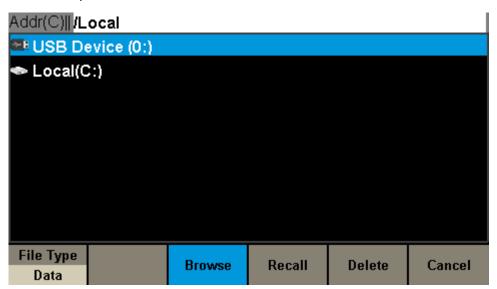

3. Select "USB Device" thru the knob on the front panel, press "Browse", and then select the correct ads file using the knob



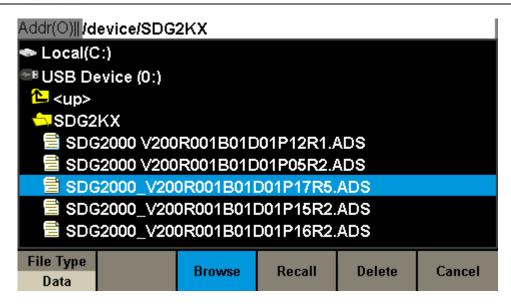

4. Press "Recall" to start the update. A progress bar is displayed during the update. After the update is completed, the generator will restart automatically.

WARNING: DO NOT shut off the instrument until the update is completed.