

Revision History

Version	Revision
01.01.03.01.18 2018/10/18	<ol style="list-style-type: none">1. UI related changes2. increase bandwidth upgrade options3. state file related modifications4. IP flag related status display modification5. LF SWEEP trigger settings related modifications6. Preset related settings to modify

Update Instructions

1 Note: During the updating, do not cut off the power or pull out the U-disk.

1. Please firstly copy the update file (.ADS) to a U-disk.
2. Insert the U-disk.
3. Press **UTILITY**, we can enter **Update** in UTILITY menu.

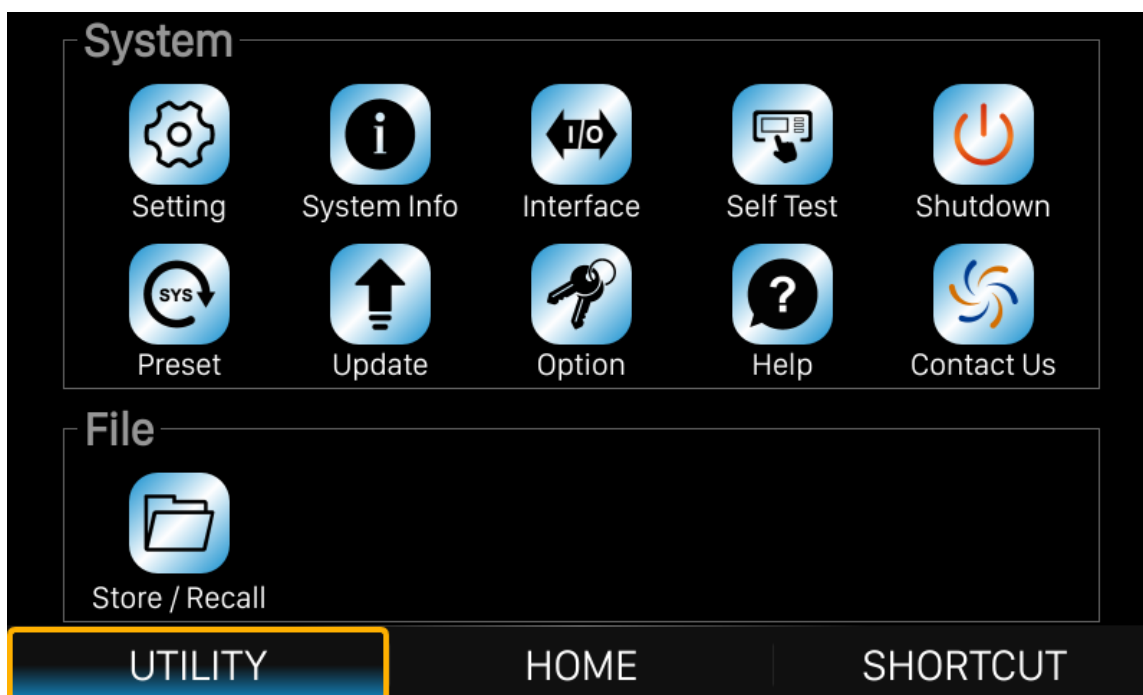


Figure 1 UTILITY function menu

4. Press **Update** and then enter the file system (or you can press **Store/Recall** button to enter the file system).

Name:	Size:	Type:	Date:
U-disk0		Folder	1970/01/01
V30R005S03D01P18.A...	8.6 MB	ADS	2018/10/29
V30R005S03D01P17r1...	25.8 MB	ADS	2018/10/02
V30R005S03D01P17.ADS	5.5 MB	ADS	2018/10/02
V30R005S03D01P16r2....	5.5 MB	ADS	2018/10/02
V30R005S03D01P16r1....	29.3 MB	ADS	2018/07/31
V30R005S03D01P16.A...	29.3 MB	ADS	2018/07/24
V30R005S03D01P15r2....	30.6 MB	ADS	2018/07/10
V30R005S03D01P15r1....	30.6 MB	ADS	2018/06/27
V30R005S03D01P15.A...	27.5 MB	ADS	2018/06/12

Recall New Dir Delete Rename Copy **Return**

Figure 2 File system

5. Select the update firmware which should be with an ADS postfix. Press **Recall** to start the update. A progress bar is displayed during the update. After the update is completed, the generator will restart automatically.
6. After the signal generator restarted, we can check the version information in System Info.