


Update instructions for SDM3045X


The software of the multimeter can be updated directly from the USB flash drive.

Update Procedure:

1. Copy the update file to the USB flash drive in the root directory.
2. Insert the USB flash drive into the USB host interface on the front panel of the multimeter.
3. Press the “Shift” softkey and the “Dual” softkey to go into Utility mode.
4. Press the “System Setup” softkey

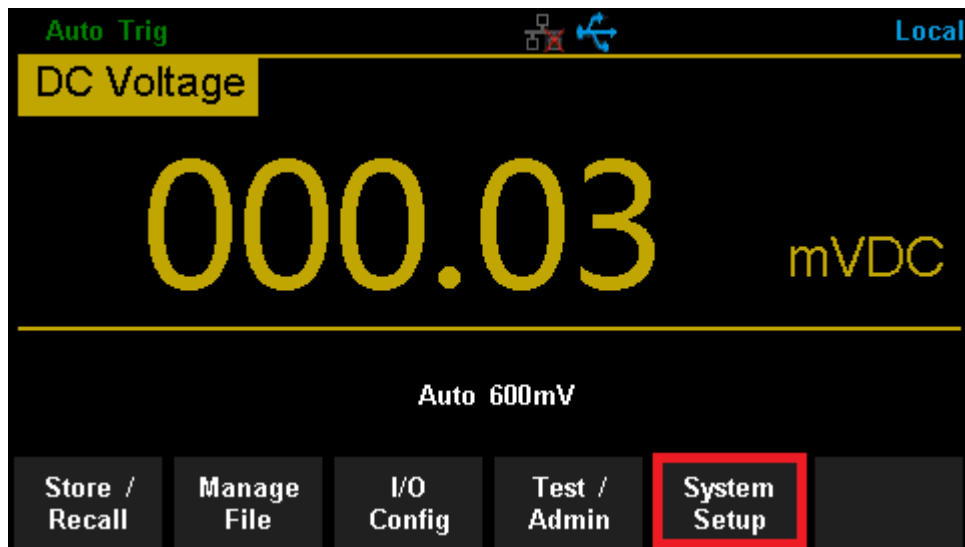

5. Press the “Firmware Update” softkey

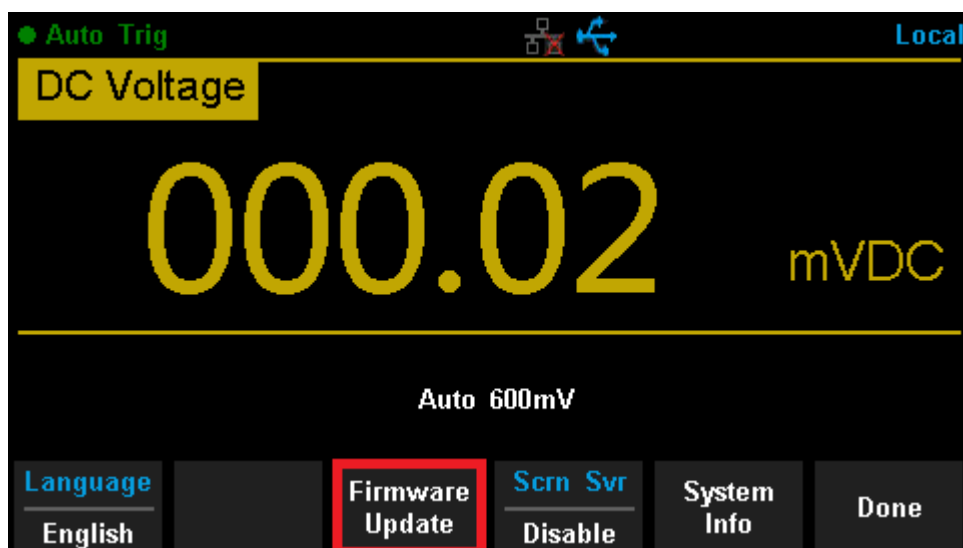

6. Press the “Browse” softkey



7. Scroll down with arrow keys and highlight the “external” drive and then press the *right arrow key* to see the files in the external drive (the USB drive)



8. Scroll down and highlight the appropriate ADS file
9. Press the “Select” softkey. Now you will see the selected firmware file in the File Name window.
10. Press the “Update” softkey, the screen will say, Are you sure to perform it? Press “Yes”



11. (Screen will say as it is performing the update, “Firmware update process” – When it is finished it says, “Update Succeed”
12. Press the “Done” softkey, pull out the flash drive and reboot the

instrument.

13. You can now check the firmware update by pressing the “Shift” softkey and the “Dual” softkey to go into the Utility mode.
14. Press the “System Setup” softkey and press the “System info” softkey and you can view the SW Version

WARNING:

Upgrading need several minutes!

Do not shut down the instrument during updating!