



## SHS800/1000 Firmware Update Instructions

**Note: During the update, do not cut off the power or pull out the U-disk.  
If the machine is updated from any version, perform a self-calibration after the CFG file is upgraded.**

1. Unzip the .zip file and copy the .ADS file to a flash drive.
2. Insert the flash drive into the USB interface on the oscilloscope.
3. Press the “User” button to enter the UTILITY function menu.
4. Press the “Next Page” softkey to go to the third page of the UTILITY function menu.
5. Press the “Update Firmware” softkey to enter the UPDATE function menu.
6. Press the “F4” softkey , select the correct ADS file and then load the selected ADS file.

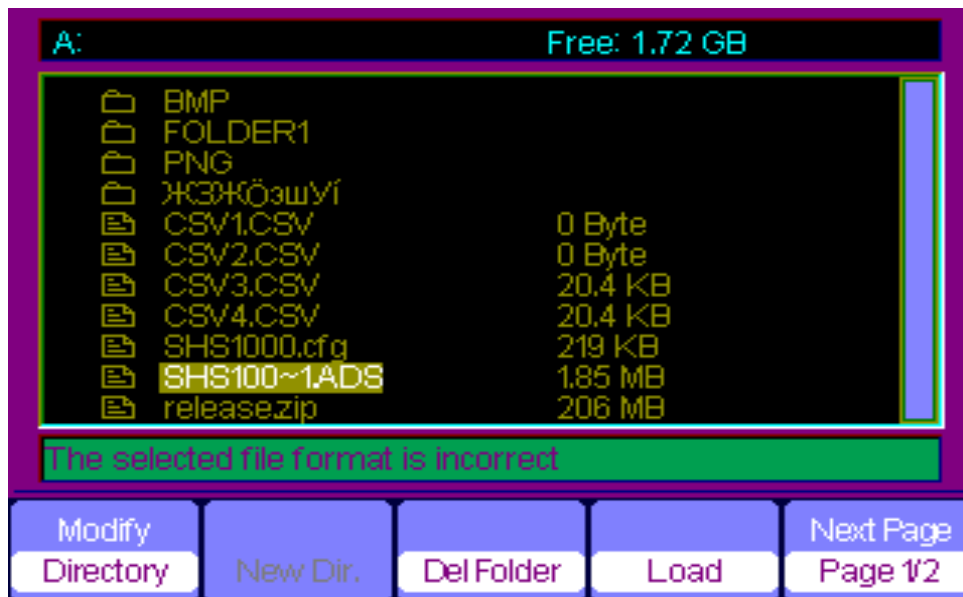

7. When the window show you the firmware updated successfully , please restart the SHS.
8. Press the “Save/Recall” button and the “F1” softkey to switch the type to the “Factory”. Then press the “F4” softkey to update Cfg.

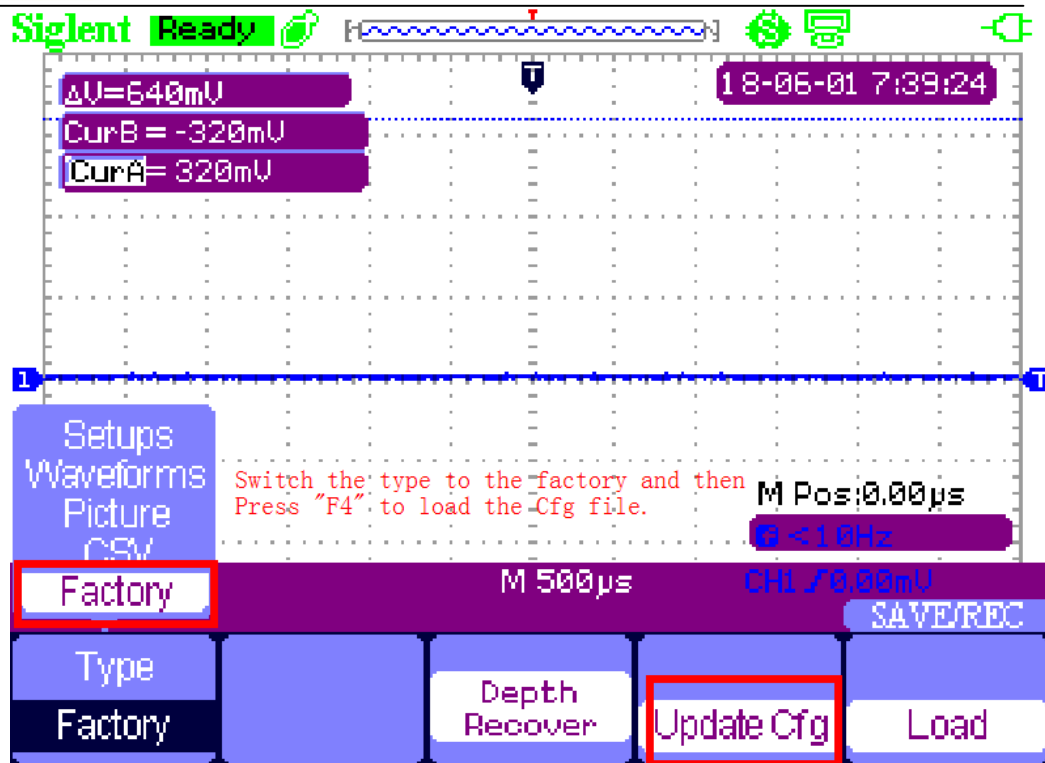

9. Select the correct CFG file and press "F4" softkey to load this file.



10. Press "User" button to enter the UTILITY page and press the "System Status" to confirm the version number under "Software Version" matches your update version.
11. Turn the page 2, press "F1" ( Do Self Cal ) to perform self-calibration.
12. Follow instructions to "Press 'F4' key to begin."

13. Window will open showing self-calibration in process. When process finished , Press "F5" key to exit.

**Note: During the update, do not cut off the power or pull out the U-disk.  
If the machine is updated from any version, perform a self-calibration after the CFG file is upgraded.**