


Potential Solutions to Easy software window rendering/font issues

March 08, 2018

The installation of SIGLENT EasySpectrum and other “Easy” software is typically uneventful. But, there may be an occasional issue.

Here are some steps that may help clear up any issues that you may encounter:

Here is an example of a mis-rendered window view of EasySpectrum:

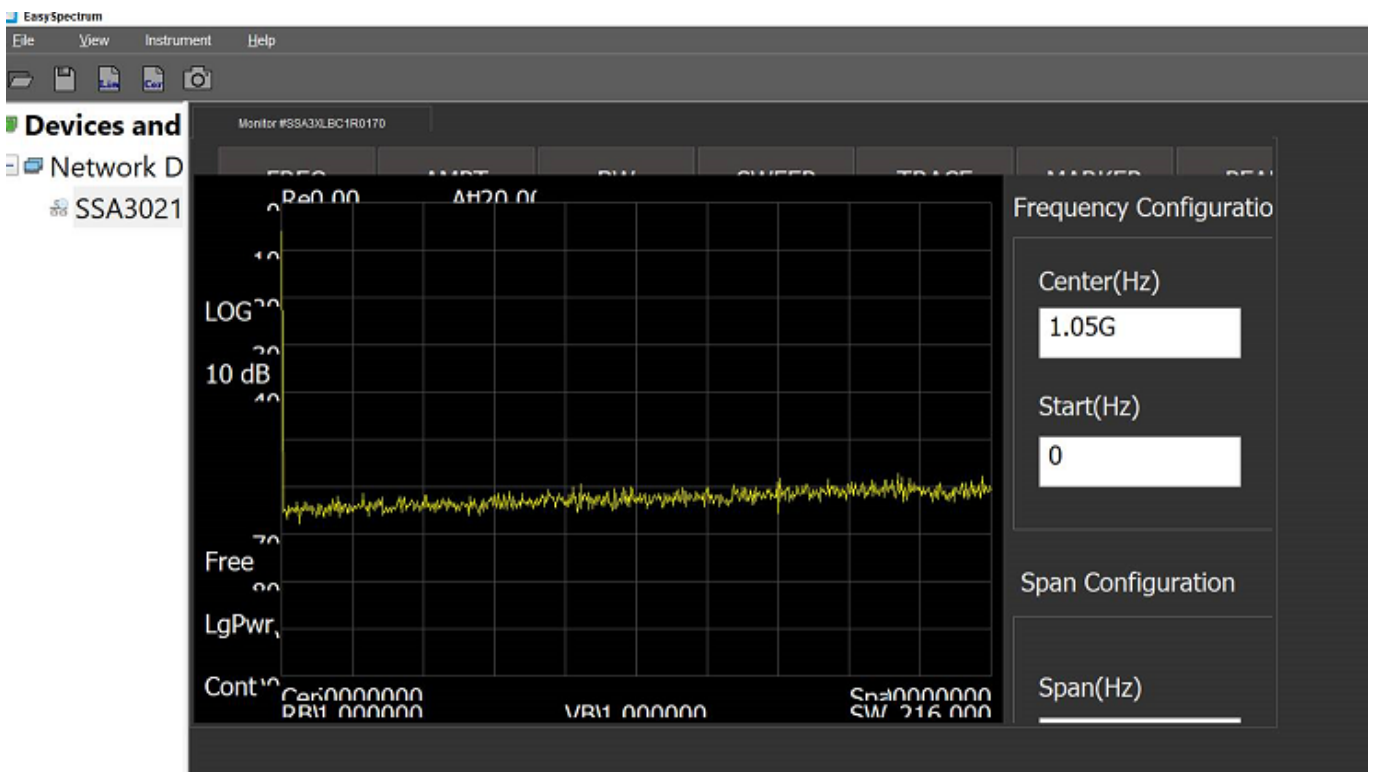

Here are some steps that may help fix the issue:

1. Set the computer's screen resolution to 1600×900 (or lower)
2. Uninstall Easyspectrum software from the computer
3. Reboot the computer
4. Search in “Program Files (x86)” directory for “easy”
5. Delete the “Easy Tools” directory and any other SIGLENT “easy” software references
6. Re-Install Easyspectrum software



North American Headquarters

SIGLENT Technologies NA
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentna.com

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH
Liebigstrasse 2-20, Gebaeude 14,
22113 Hamburg Germany
Tel: +49(0)40-819-95946
Fax: +49(0)40-819-95947
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3688 7876
Fax: + 86 755 3359 1582
sales@siglent.com
www.int.siglent.com