


# Potential Solutions to Easy software window rendering/font issues

March 08, 2018

The installation of SIGLENT EasySpectrum and other “Easy” software is typically uneventful. But, there may be an occasional issue.

Here are some steps that may help clear up any issues that you may encounter:

Here is an example of a mis-rendered window view of EasySpectrum:

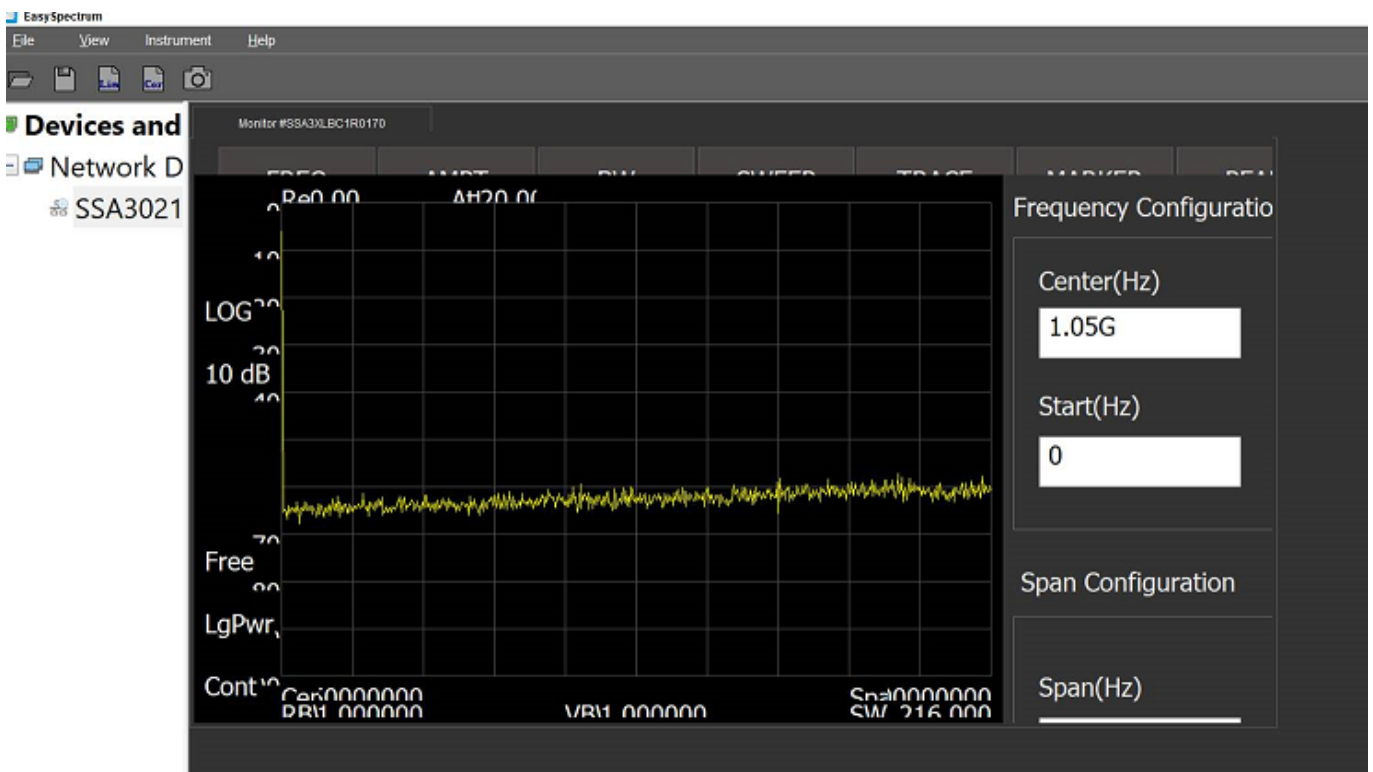

Here are some steps that may help fix the issue:

1. Set the computer’s screen resolution to 1600×900 (or lower)
2. Uninstall Easyspectrum software from the computer
3. Reboot the computer
4. Search in “Program Files (x86)” directory for “easy”
5. Delete the “Easy Tools” directory and any other SIGLENT “easy” software references
6. Re-Install Easyspectrum software



### **North American Headquarters**

SIGLENT Technologies NA  
6557 Cochran Rd Solon, Ohio 44139  
Tel: 440-398-5800  
Toll Free: 877-515-5551  
Fax: 440-399-1211  
[info@siglent.com](mailto:info@siglent.com)  
[www.siglentamerica.com/](http://www.siglentamerica.com/)

### **European Sales Offices**

SIGLENT TECHNOLOGIES GERMANY GmbH  
Staetzlinger Str. 70  
86165 Augsburg, Germany  
Tel: +49(0)-821-666 0 111 0  
Fax: +49(0)-821-666 0 111 22  
[info-eu@siglent.com](mailto:info-eu@siglent.com)  
[www.siglenteu.com](http://www.siglenteu.com)

### **Asian Headquarters**

SIGLENT TECHNOLOGIES CO., LTD.  
Blog No.4 & No.5, Antongda Industrial Zone,  
3rd Liuxian Road, Bao'an District,  
Shenzhen, 518101, China.  
Tel: + 86 755 3661 5186  
Fax: + 86 755 3359 1582  
[sales@siglent.com](mailto:sales@siglent.com)  
[www.siglent.com/ens](http://www.siglent.com/ens)