

SIGLENT SPA1010 Amplifier output control


January 15, 2019

The SIGLENT SPA1010 Amplifier can be a useful accessory for applications requiring higher voltage and/or current from a signal source like a SIGLENT SDG arbitrary waveform generator.

The SPA features a power-on indicator LED, Short LED, a X10 indicator LED, and a set of switches on the front panel.

To use:

1. Connect the output of your source to the SPA input.
2. Connect the SPA output to your DUT.
3. Select x1 (unity voltage) or x10 (10 x source voltage)
4. Select ON when you wish to source an output signal from the SPA

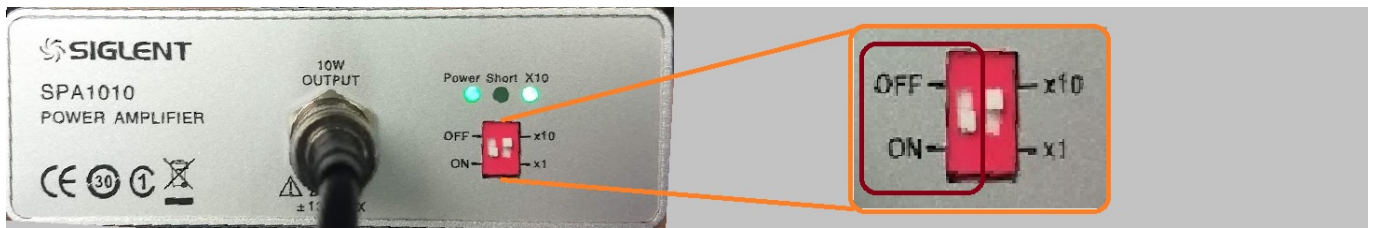

NOTE: If the power switch is left in the OFF position, the output will be held at 0 V.



North American Headquarters

SIGLENT Technologies NA
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglentna.com
www.siglentna.com

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH
Liebigstrasse 2-20, Gebaeude 14,
22113 Hamburg Germany
Tel: +49(0)40-819-95946
Fax: +49(0)40-819-95947
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3688 7876
Fax: + 86 755 3359 1582
sales@siglent.com
www.int.siglent.com