


Spectrum Monitor (waterfall chart) in EasySpectrum software

December 14, 2018

SIGLENT EasySpectrum software includes a spectrum monitor mode that shows a waterfall chart of successive scans. This can be useful if you are observing a carrier signal for drift as well as comparing successive spectral scans.


To enable the spectrum monitor:

1. Download EasySpectrum. Here is a link to the [EasySpectrum Getting Started Guide](#)
2. Connect your SIGLENT analyzer to the controlling computer
3. Open the EasySpectrum software
4. Right-click to select the spectrum analyzer from the list (USB connection) or enter the LAN address and choose Monitor Mode

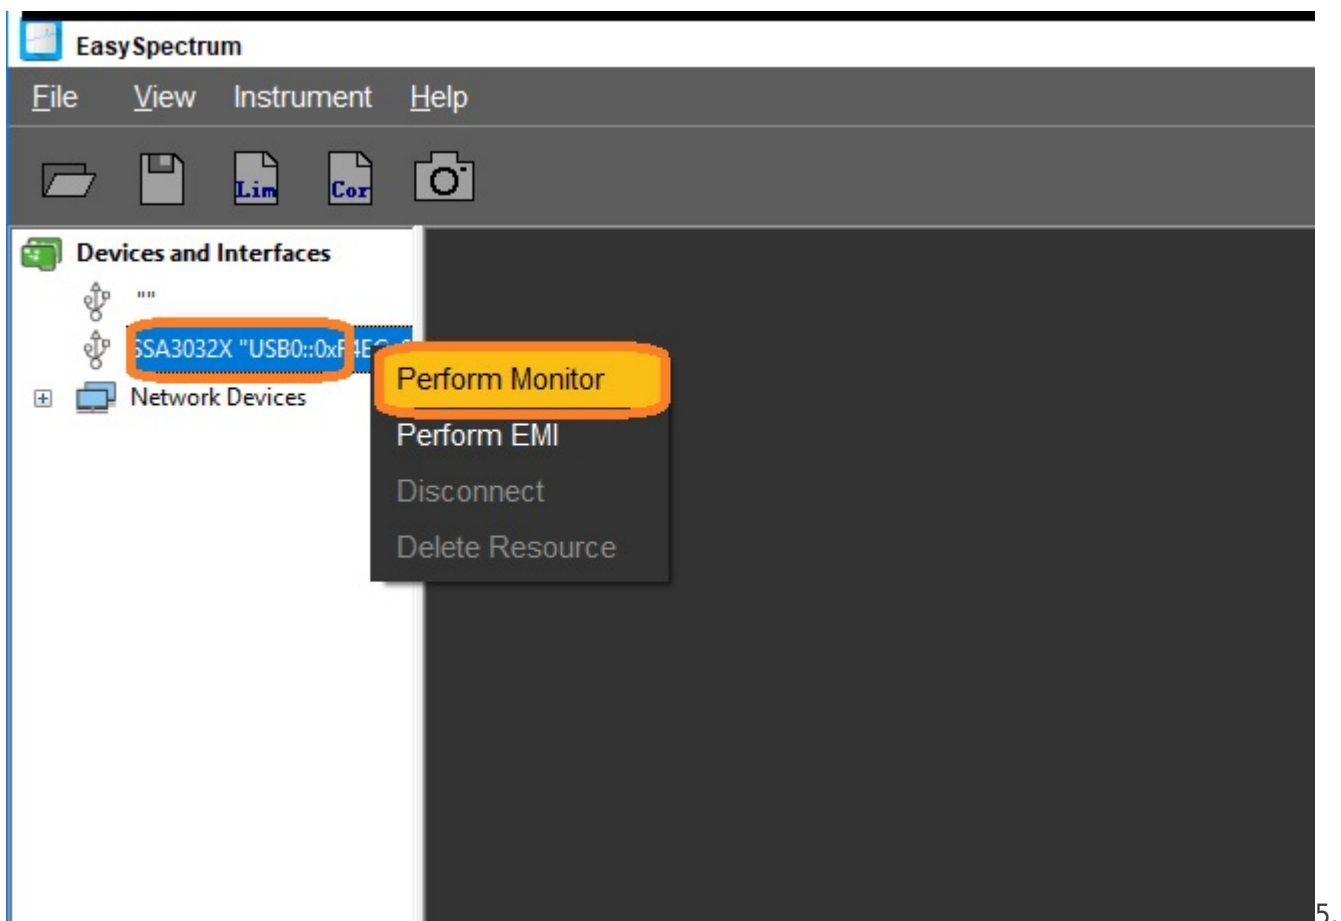


5. Configure the analyzer to view the span of interest

6. Select MEAS, open the drop-down box, and select Spectrum Monitor

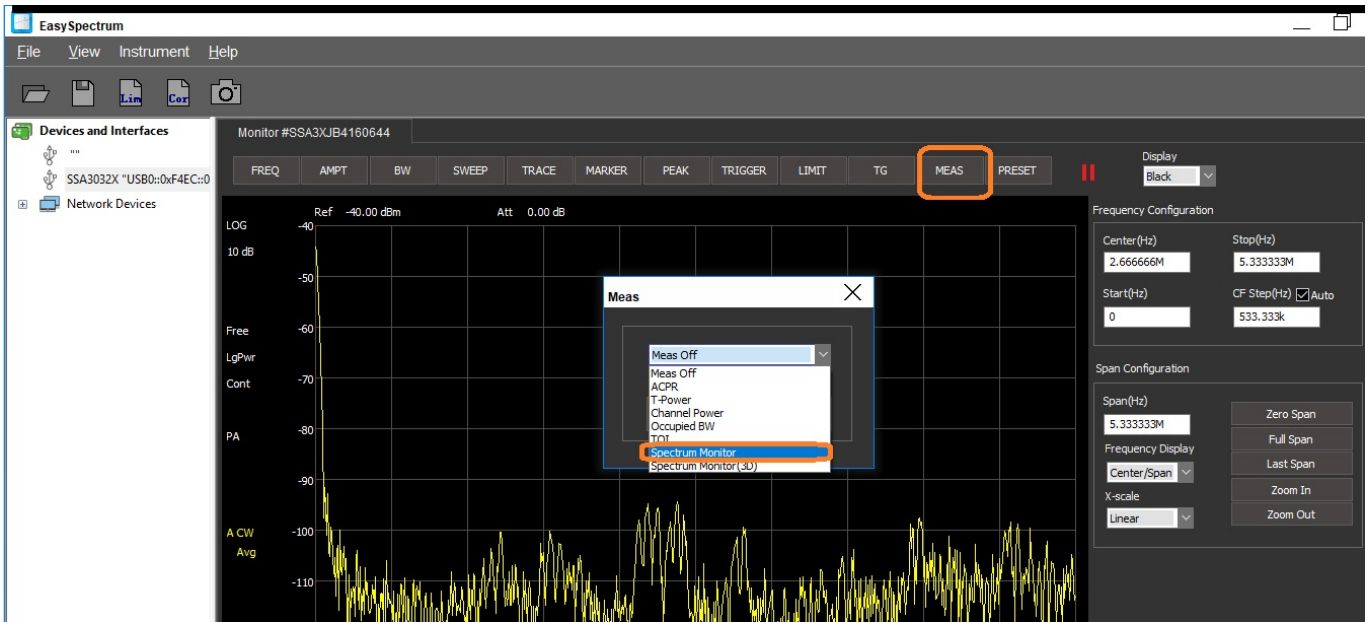

7. Now, successive scans will be shown building up from the bottom of the display as shown:

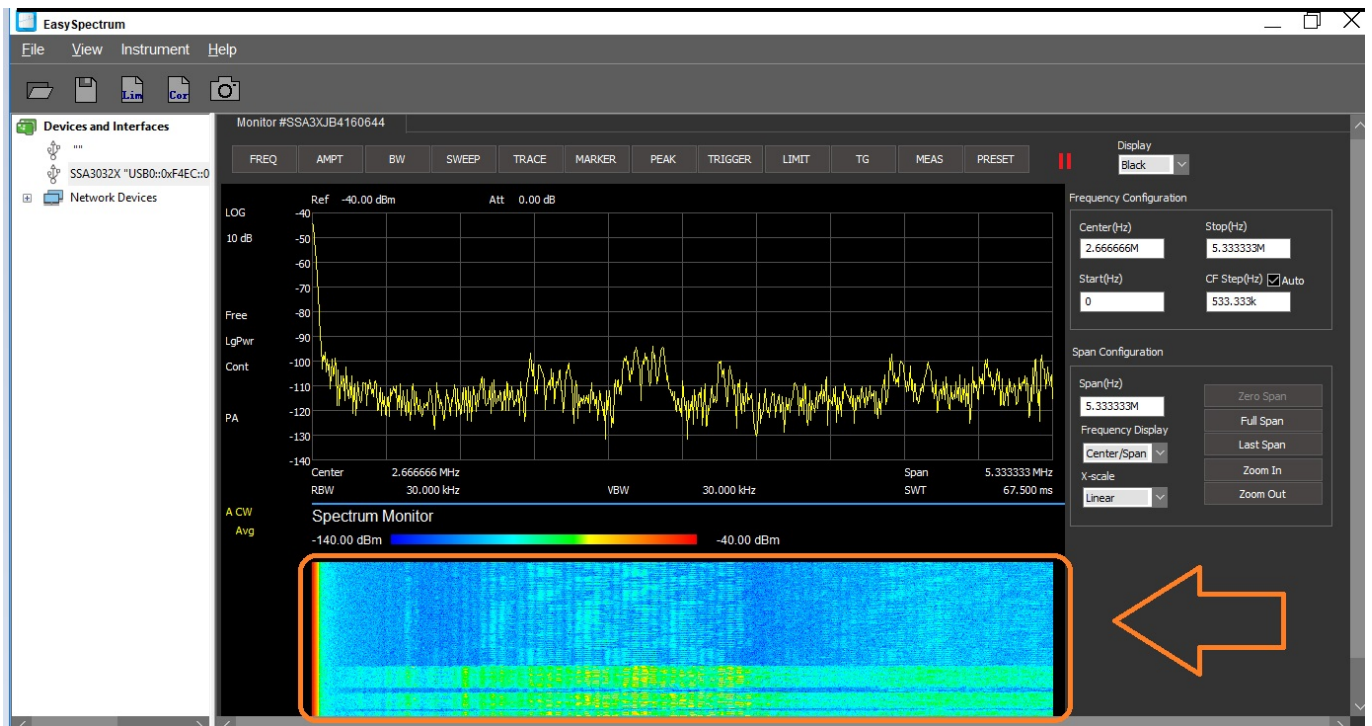



North American Headquarters

SIGLENT Technologies NA
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH
Staetzlinger Str. 70
86165 Augsburg, Germany
Tel: +49(0)-821-666 0 111 0
Fax: +49(0)-821-666 0 111 22
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3661 5186
Fax: + 86 755 3359 1582
sales@siglent.com
www.siglent.com/ens