


SSA3000X Plus Firmware Revision History


Version	Revision
V2.2.1.2.5 2019/11/11	<p>Improvements:</p> <ul style="list-style-type: none">• Optimize trace, marker, signal track, TG normalization , Reflection measurement in SA Mode• Optimize web server UI <p>Solved Issues:</p> <ul style="list-style-type: none">• Fixed video trigger fail, errors in Harmonic measurement in SA Mode• Fixed spectrum amplitude error, meas error, waveform discontinue in MA Mode• Fixed English help, system message

Update Instructions


- Copy the update file (*.ads) to a FLASH type U-disk, and then connect the U-disk to the USB host port(10) of the instrument.

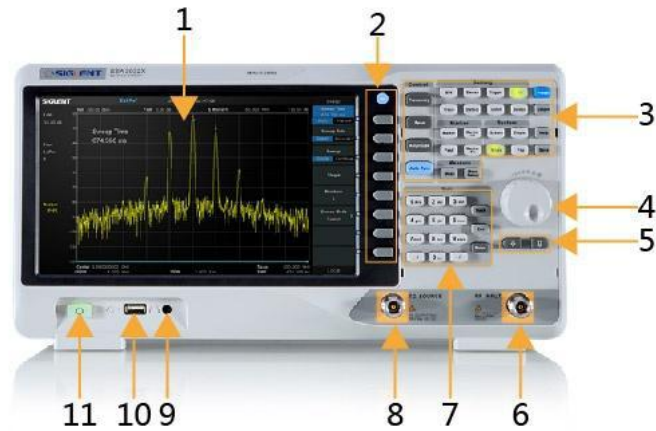


- Press the **System** key on the front panel, and then softkey “System->System Info-> Firmware Update”, to enter the interface of the file browser.

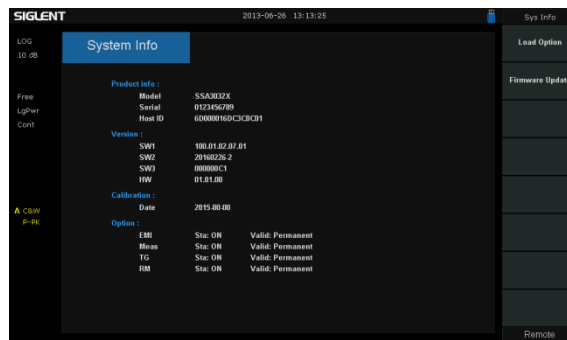


- Select “ U-disk” thru the knob on the front panel, press “Browser”, and then select the correct **ADS file** using the knob

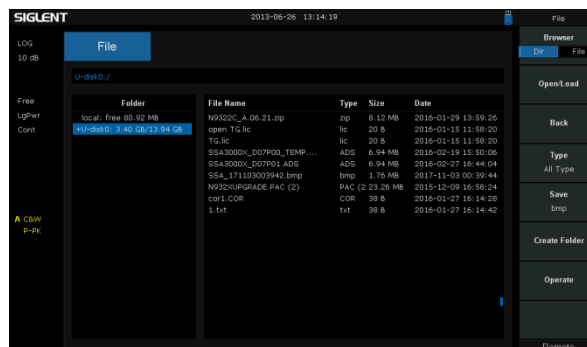

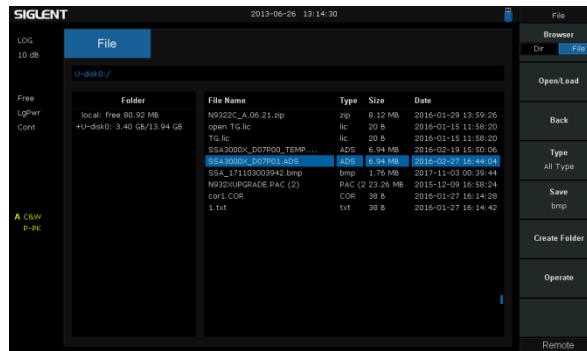

- Press "Open/Load" to start the update. A progress bar is displayed during the update. When updating complete, the spectrum analyzer will restart automatically.

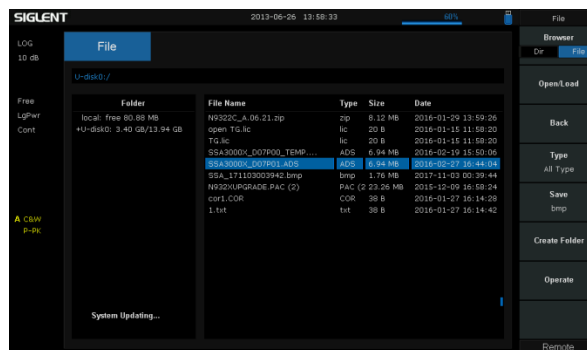

WARNING:

DO NOT shut down the instrument during updating