

SIGLENT X and X-E series oscilloscopes Sequence and History mode

October 25, 2017

With the advance of science and technology, more demands are being placed upon stability, performance, and the intelligence of electronic products. Product design engineers face many problems with the verification and debugging of high-speed signals. A typical example is intermittent glitches with some low duty cycle signals, such as laser pulses or other signals. To analyze these signals, it requires more oscilloscope performance: not only higher sampling rates and deeper memory depth, but also a higher waveform capture rate.

Challenges to the traditional testing methods

In digital oscilloscopes, sampling rate and sampling time has the following relationship: **sampling rate × sampling time = memory depth**. According to the formula above, if you want to increase the sampling time while memory depth is fixed, it is necessary to reduce the sampling rate. But a lower sampling rate will reduce the level of resolution, which is a contradiction between the two. Therefore, when testing continuous low-duty cycle pulse or burst signal with long intervals the conventional way, you must choose between the trade-off of reducing the sampling rate and sampling time, which in actual testing, brings up a serious challenge.

Here is an example to illustrate. As shown in Figure 1, the pulse signal appears between an equal interval, the time of interval is 50ms.

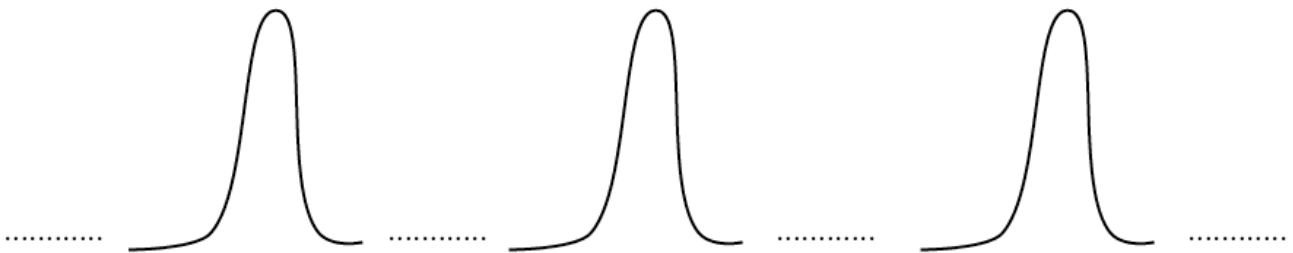


Figure 1 Equally spaced pulses

We are using a SIGLENT SDG2000X series Function/Arbitrary Waveform Generator to reproduce a similar signal that takes a pulse signal with 5 equal-intervals as an example. See figure 2:

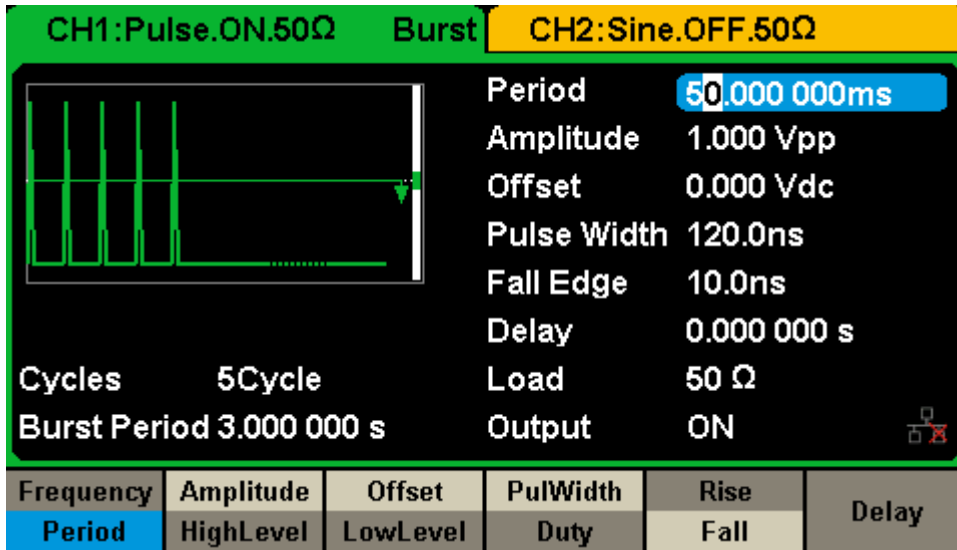


Figure 2 SDG2102X Parameters Menu

This is a pulse signal with an equal interval time of 50 ms whose rise time is set to 10 ns, pulse width is 120 ns. If we only need to observe one pulse of the signal, we usually use the “auto setup” key to capture the pulse with a high sampling rate. Along with the measurement function, you can acquire more waveform details. Next, we can use a SIGLENT SDS1000X series oscilloscope to capture the waveform, as shown in figure 3:

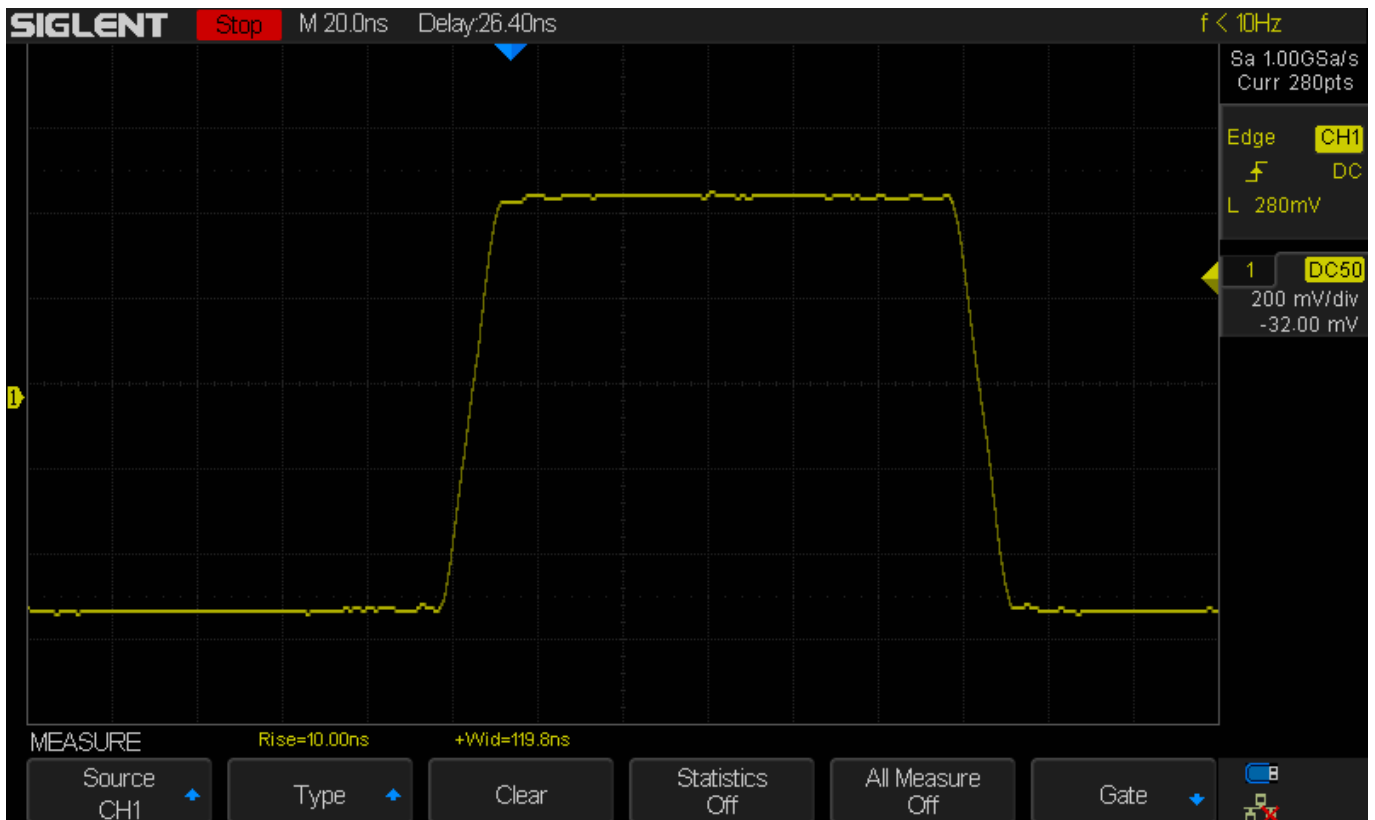


Figure 3 Waveform characteristics of one single pulse

However, if you want to capture and observe a number of successive pulses, the conventional approach is to increase the sampling time. But it will inevitably reduce the sampling rate due to the limited memory

depth. Low sample rates cannot achieve an accurate representation of the waveform.

The following figure shows five successive pulse signals acquired by conventional methods.

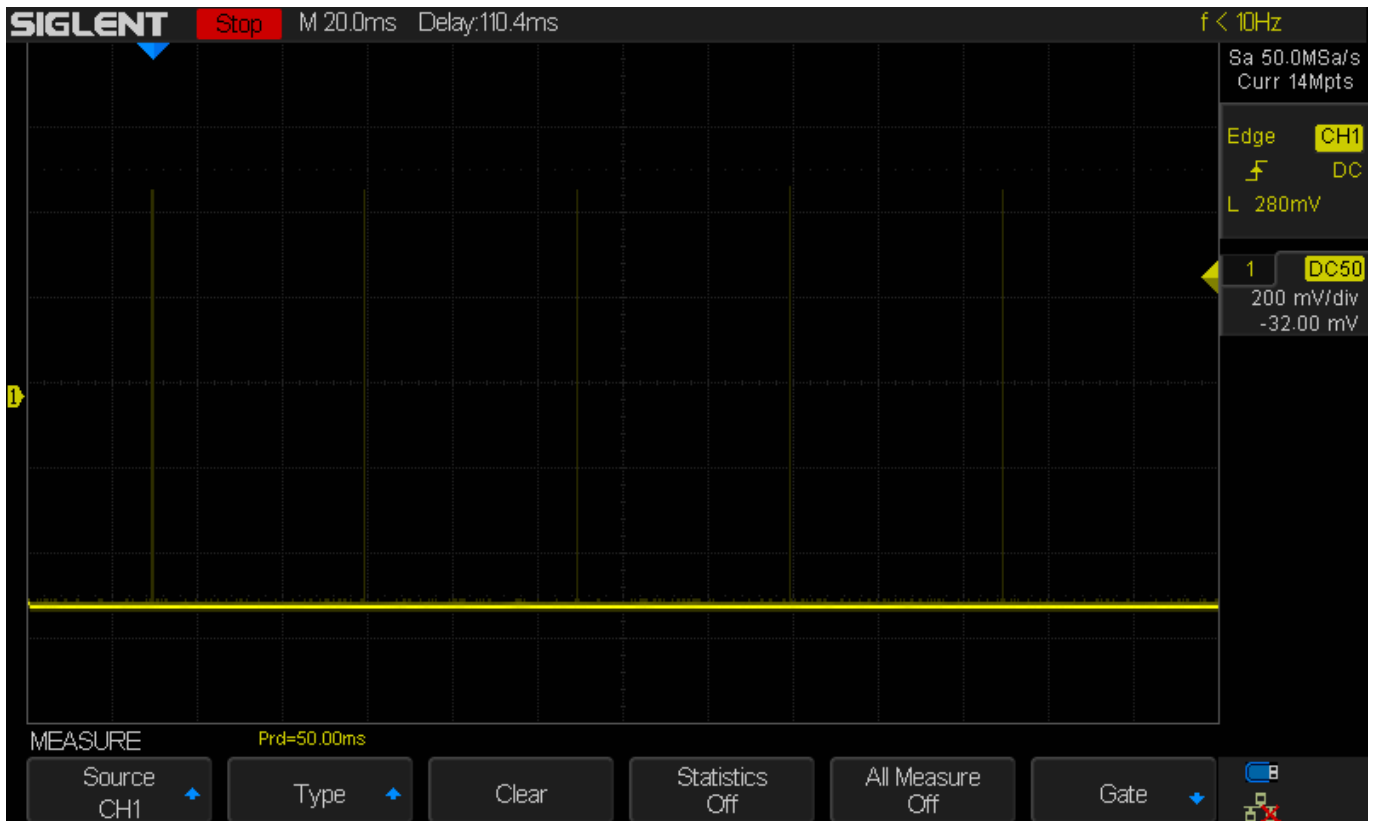


Figure 4 Five successive pulse signals acquired by traditional methods

We set the memory depth up to 14 Mpts. In order to acquire all five pulses, the time base is set to 20 ms/div. Compared to FIG. 3, the time base is expanded 1,000 times. It can be seen from Figure 4, the current sampling rate is only 50 MSa/s, thus we can know the sample interval is only $1 / 50M = 20$ ns. Therefore, we can only acquire less than two points during the signal rising edge, or even none of the points can be acquired. So it makes no sense for us to analyze the characteristic of the signal parameters (rise time, pulse width, duty cycle, etc.).

Of course, in theory, users can expand the memory depth to increase the sample duration while the sample rate remains fixed. However, this approach has its limitations:

1. High-speed acquisition memory (memory depth) is an expensive resource, and it is difficult to quantitatively determine how much storage capacity is needed in the end.
2. The deeper memory depth will make the acquiring and processing time become longer. It inevitably means that the interval between two acquisitions becomes longer too. Thus, the sampling rate will drop because of the increased dead time.

The example above is a signal analysis based on five 50 ms interval pulse signals. In practice, the number of equal-interval pulse signals we need to analyze may be far more than five. In addition, it's useless for us to analyze the rotor and laser pulse signal by conventional measurement methods without advanced analysis tools because of the potentially long intervals between two abnormal waveforms of several hours

to even tens of hours.

The history and sequence mode of the X-Series Oscilloscope

Sequence mode

To solve this problem, Siglent has an innovative solution called the “segmented acquisition mode” which divides the memory unit into several sequences. Each sequence stores the current triggered waveform. Once triggered, it will be saved in the segment (see figure 5).

The benefits of this acquisition mode allow engineers to select the fragment they are interested in regardless of the redundant part, and it also improves the utilization rate of valuable storage depth. Furthermore, as the amount of processing data gets smaller, processing speed gets faster, equivalent waveform capture rate gets higher, and dead time drops off significantly. In the sequence mode, the minimum dead time of the SDS1000X Series can drop to 2.5 μ s, and the SDS2000X series can drop as low as 2 μ s.

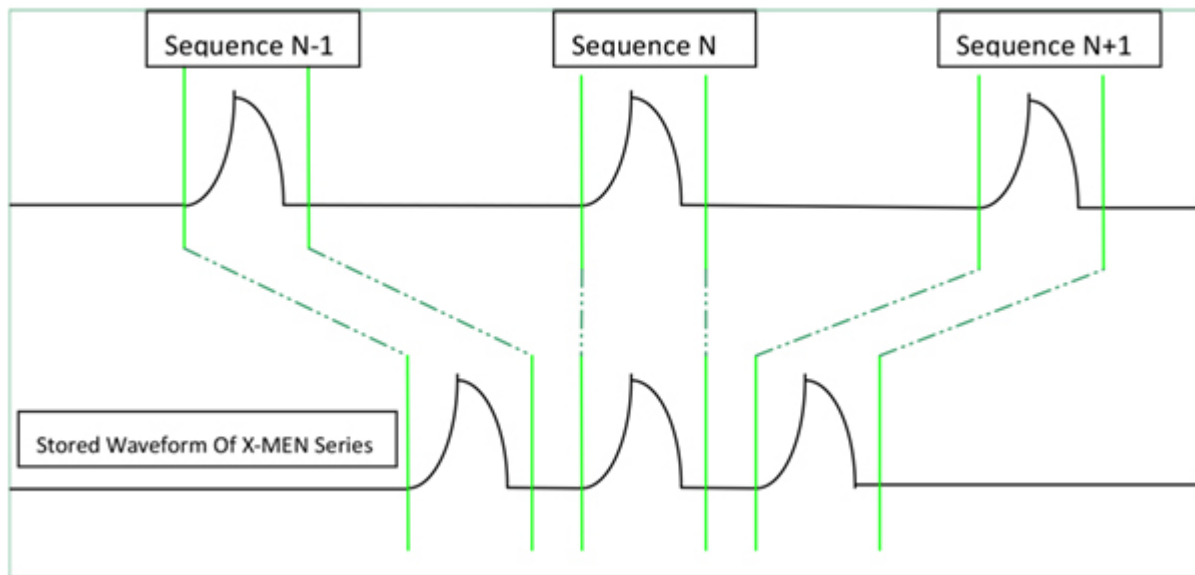


Figure 5: Schematic diagram of sequence

History mode

The history mode is a background permanent history waveform recording mode that can be started with one key. A maximum of 80,000 frames can be recorded. The history waveforms can be taken out from the buffer at any time and can be analyzed frame by frame coordinated with the waveform navigation function. It provides the chronology of each frame, displayed in a list, so that we can calculate the interval time between adjacent frames, and the subtle changes in the signal.

Examples of sequence and history mode

Capturing fast-changing signals can make up for insufficient real-time waveform capture rates. With the rapid development of electronic technology, the waveform capture rate of digital oscilloscopes has been steadily improving. But we should understand that all the maximum waveform capture rates attained by manufacturers cannot satisfy certain circumstances such as: opening interpolation,

mathematical operation, measurement and so on. Even more, the time base setting must be adjusted to a slower sweep speed, because the real-time waveform capture rate will be lower with a higher sweep speed. In an era of commercial hype, we should beware of false publicity by manufacturers and verify their claims by using the principle “practice is the sole criteria for testing truth.” We must also choose a suitable measuring method under different conditions to find the best oscilloscope for our application.

The sequence mode of X-series digital oscilloscope can effectively improve the real-time waveform capture rate. By using the same time base setting, compared to real-time mode, the equivalent waveform capture rate under sequence mode is increased substantially.

Next, here’s an example of a Siglent SDS1000X series oscilloscope:

As shown in figure 6, we will use the SDG2000X to simulate a five successive equal interval of 4 us pulse signal, with its rising of 10 ns, pulse width of 80 ns, trigger source is set to manual:

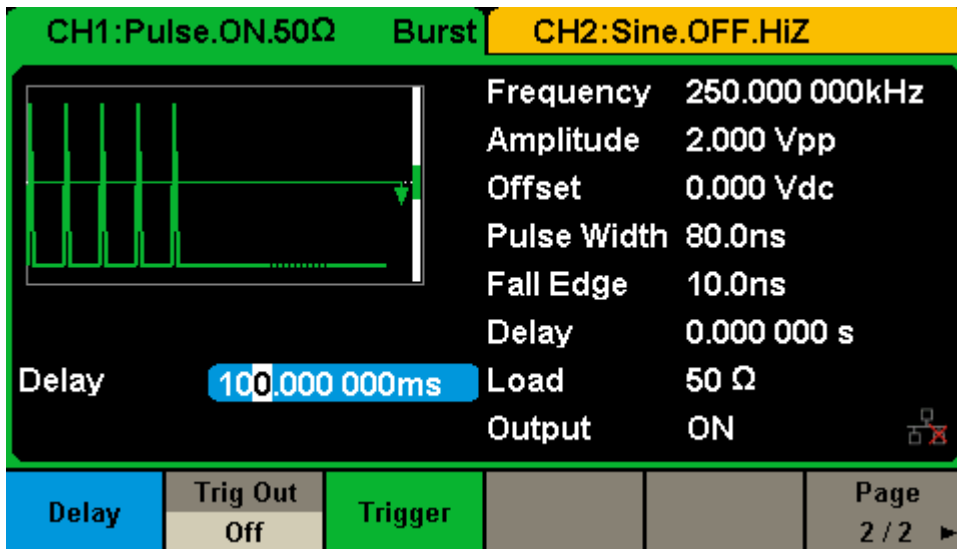


Figure 6 five successive equal interval of 4us pulse signal

In theory, to capture all of the five pulses , the waveform capture rate should be at least 250,000 wfms/s. Combined with measurement function, the result is shown below with its rise time (Rise) and pulse width (+Wid) displayed on the screen:

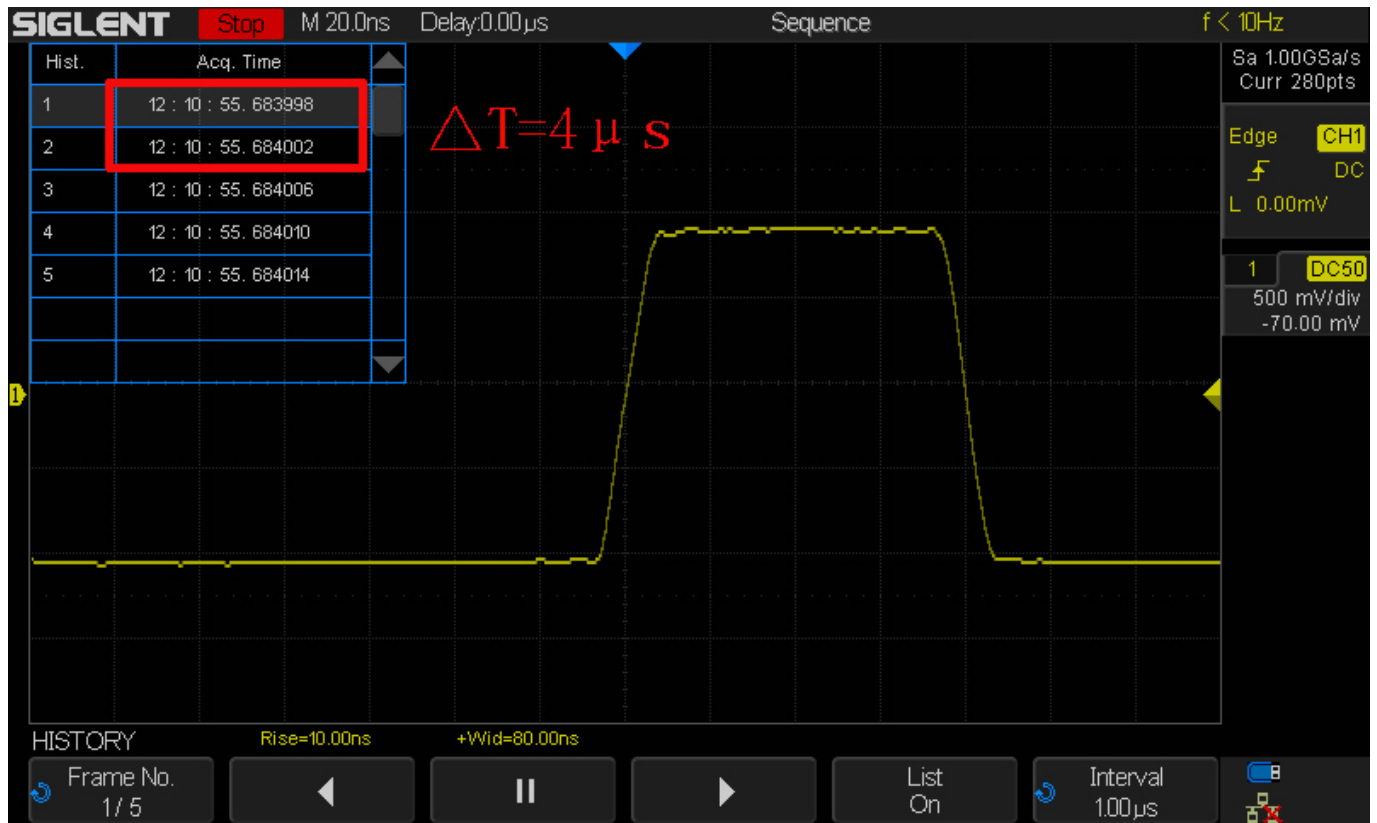


Figure 7: Acquisition of all of the five pulse in sequence mode

We tried to capture all of the five pulses at one time in real-time mode, but unfortunately, only one pulse can be acquired on the screen shown in figure 8:

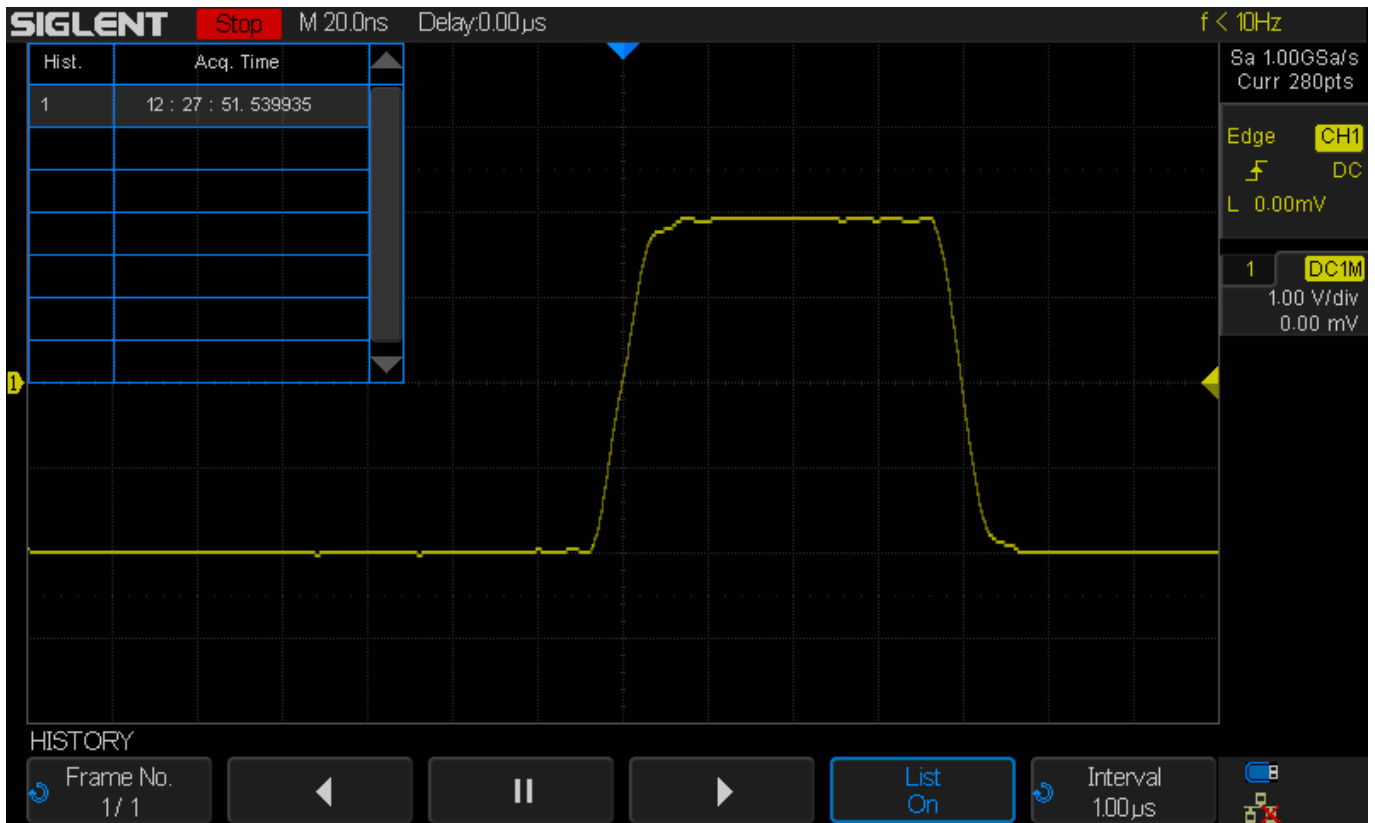


Figure 8: Only one pulse can be acquired under real-time mode

According to the number of the pulses acquired in the above two modes, we can draw the following conclusions: in sequence mode, 20 ns time base setting, the equivalent waveform capture rate can reach at least 250,000 wfms/s even if the measurement function is on. However, in real-time mode, since only one pulse can be acquired, the dead time occupied at least $4 * 4 \mu s$ and in theory it's waveform capture rate should be less than 62,500 wfms/s (The maximum waveform capture rate of the SDS1000X is 60,000 wfms/s), and therefore, compared to the real-time mode, the equivalent waveform capture rate of sequence mode is increased at least 4 times.

For acquisition and analysis of fast signals, sequence mode can make up for insufficient real-time waveform capture rate and is a great solution for people to explore.

Acquisition of long-interval pulses and accidental signals

As mentioned in **Challenges to the traditional testing methods**, Sequence mode can effectively solve such problems. For example, with a 60 s interval signal, the acquired waveform as shown in figure 9:

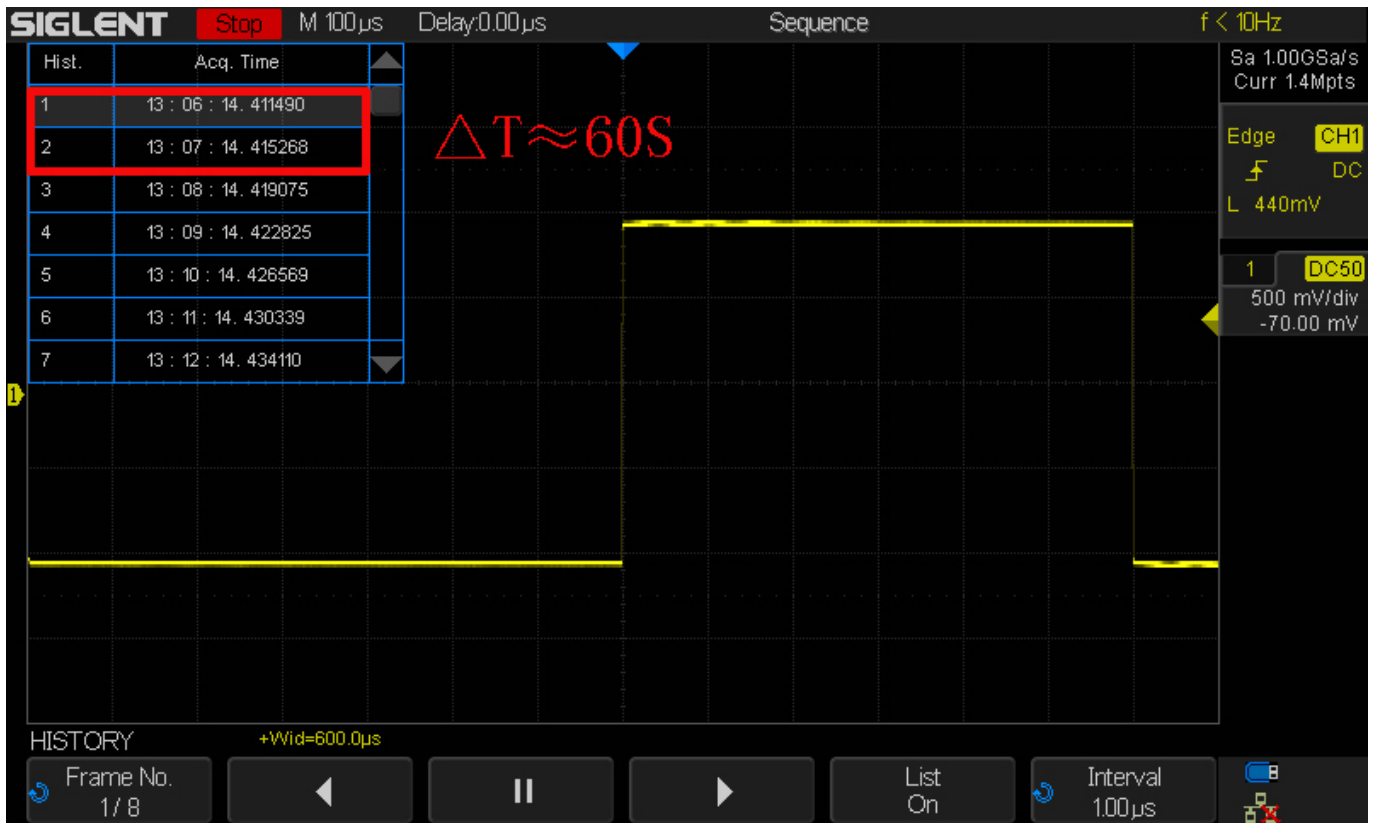


Figure 9: Sequence mode makes it easy to acquire long time interval signals

Find abnormal events in signals

In order to satisfy users' demands for high performance, highly scalable electronic products, the design of modern electronic products becomes increasingly complex and so does the debugging system. It becomes more and more important to be able to search for abnormal events and separate them from normal events.

As shown in figure 10, here is a PWM signal displayed on the screen of SDS1000X. By using the color temperature display, we can find that there is some noise in the PWM signal. How can we know the duration time and regularity of the abnormal signal? This is the case we will analyze next.

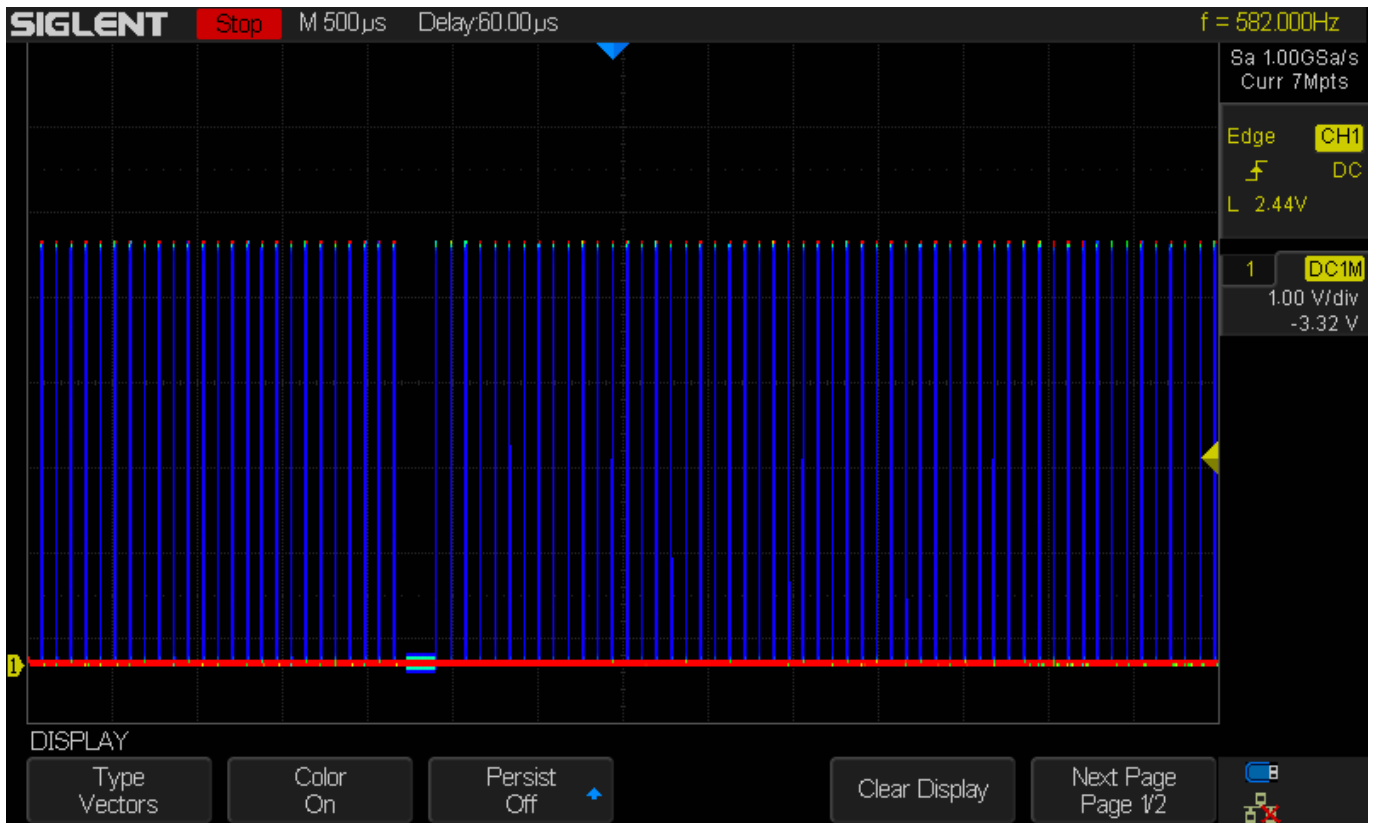


Figure 10: a PWM signal with random noise generated by a device

First we will use a negative pulse trigger to isolate the event of interest. Then we can capture a certain number of signal segments for analysis of samples using sequence mode. There are 100 abnormal frames captured by sequence mode as we see in figure 11. Combined with a dedicated navigation bar to analyze history waveforms frame by frame, we can use the triggered time and interval time between two adjacent frames to help us locate and analyze the event we are interested in.

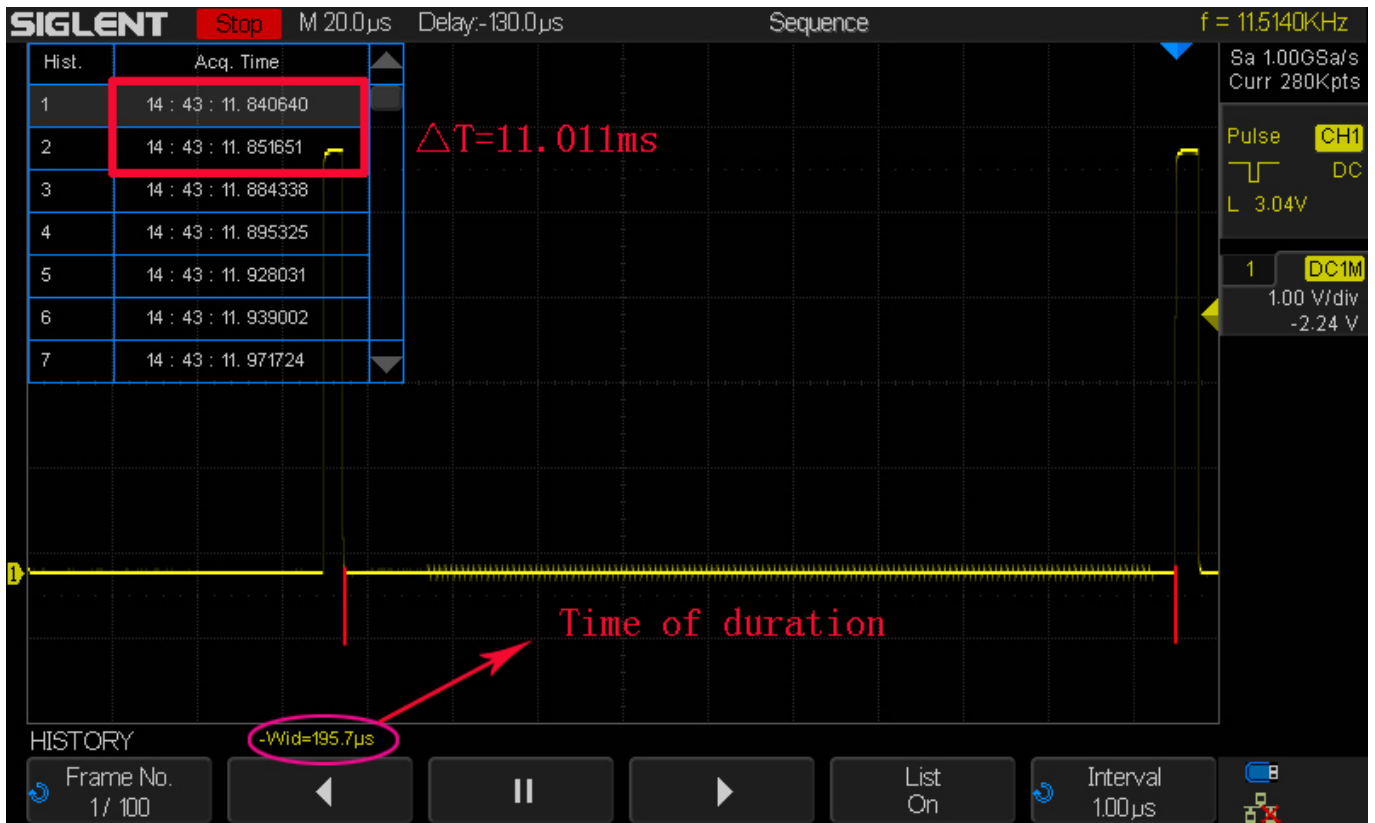


Figure 11 Analyze the regularity of abnormal events appeared by sequence mode

Summary

The sequence mode and history mode are closely related. We can easily find sporadic, intermittent glitches or low duty cycle signals, such as laser pulses. These two modes enable engineers to capture signals with a high sampling rate and at the same time not lose signal details, and thus improve the testing accuracy and the utilization of memory depth.

Combined with a dedicated navigation bar and history waveform list to analyze the waveform details, the X-series oscilloscope provides comprehensive solutions for the problems discussed above.



North American Headquarters

SIGLENT Technologies NA
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH
Staetzlinger Str. 70
86165 Augsburg, Germany
Tel: +49(0)-821-666 0 111 0
Fax: +49(0)-821-666 0 111 22
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3661 5186
Fax: + 86 755 3359 1582
sales@siglent.com
www.siglent.com/ens