

How to activate the SDG sweep marker function


May 31, 2019

The SIGLENT SDG6X series of arbitrary waveform generators feature a frequency marker function that will output a signal when the sweep output passes through a user-defined target frequency.

This can be very helpful when synchronizing measurements with other instrumentation, like oscilloscopes, that have no other way of syncing up with the frequency sweep.


To activate the frequency marker:

- 1. Activate the sweep function by pressing the Sweep button on the SDG6X front panel
- 2. Configure the sweep parameters. Here, we are going to sweep from 500 Hz to 1.5 kHz and the sweep time will be 100 ms (0.1 s).

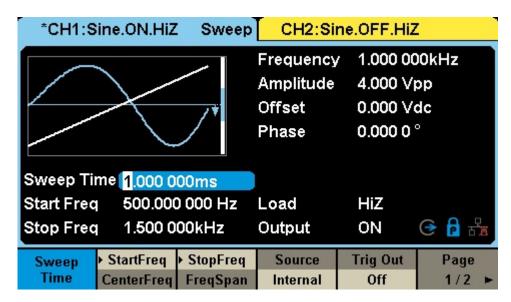


3. Go to page 2/2 and press FregMarker



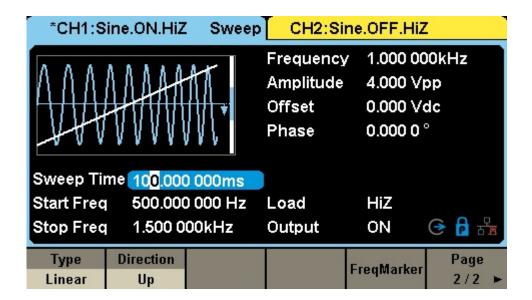


4. Set the marker frequency to 1.11 kHz and set the state to ON

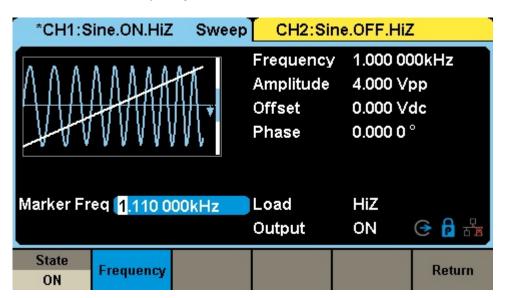

Now, we can capture the sweep on a scope, as shown below:



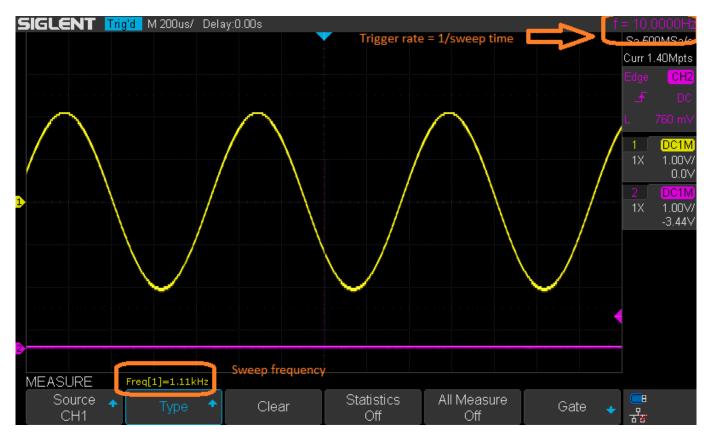



The frequency marker will output a pulse at the same time that the sweep frequency meets the setpoint for marker frequency.

In the first example, the sweep time was set to 100 ms. So, we should see 10 output pulses every second, or a 10 Hz repetition frequency and the output sweep waveform should be at 1.11 kHz, our marker frequency setpoint. Which we can confirm on the scope.

If we change the marker frequency to 1.22 kHz and the sweep time to 10 ms, we should see the marker frequency pulse occur one hundred times a second (100 Hz) and the sweep frequency should be at 1.22 kHz:



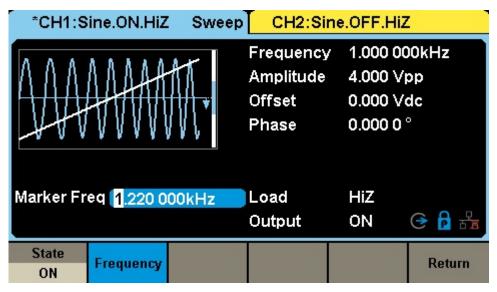

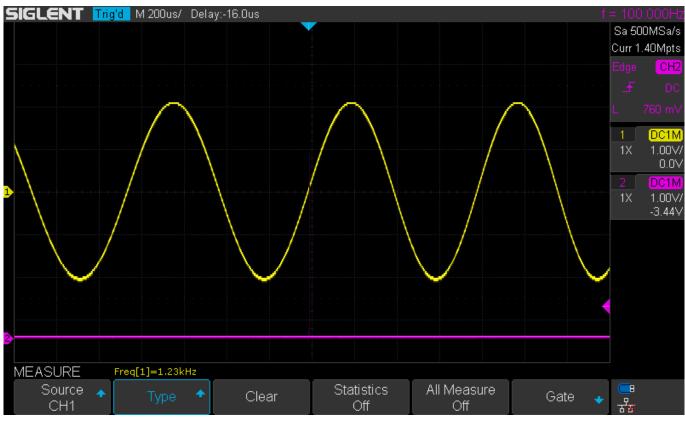



North American Headquarters

SIGLENT Technologies NA 6557 Cochran Rd Solon, Ohio 44139

Tel: 440-398-5800 Toll Free:877-515-5551 Fax: 440-399-1211 info@siglent.com

www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH Staetzlinger Str. 70 86165 Augsburg, Germany Tel: +49(0)-821-666 0 111 0

Fax: +49(0)-821-666 0 111 0

info-eu@siglent.com www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel:+ 86 755 3661 5186
Fax:+ 86 755 3359 1582

sales@siglent.com
www.siglent.com/ens