

Benefits of Deep Memory

October 23, 2017

Digital storage oscilloscopes (DSOs) operate by sampling the voltage values at each active input channel at specific time intervals. The inverse of this time interval is called the sample rate. The sample rate is usually shown in Samples/second, or Sa/s. For most scopes, the sample rate is dependent on the configuration of the scope, with the main contributors being the horizontal timebase (divisions/sec) and the memory depth selected for the storage of the collected waveforms.

If the sample rate is too low, there may not be enough data to accurately reproduce the waveform. In **Figure 1** below, we have captured an AM waveform using normal memory depth on a SIGLENT SDS1102CML scope (40kPts @ 2.5MSa/s sample rate). Note that the waveform is not very smooth.

This is due to the slow sample rate that was used to collect the data:

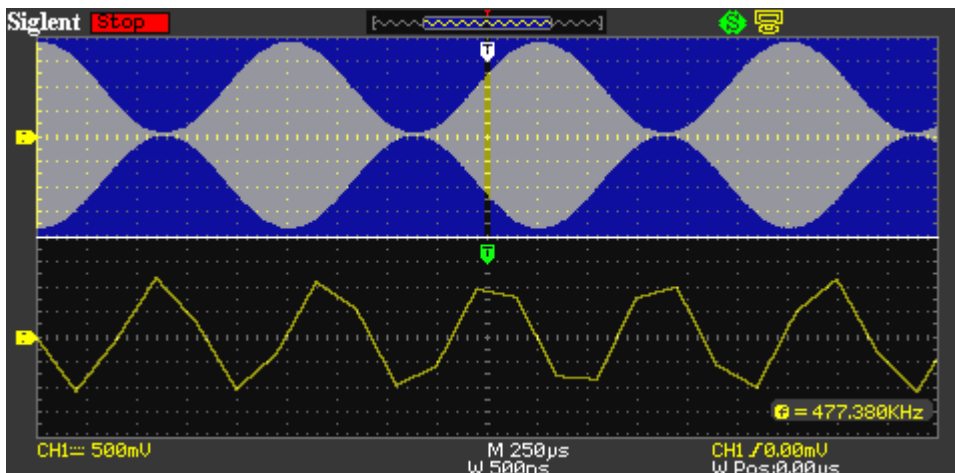


Figure 1: AM modulated input captured with 40kpt memory depth.

This can be solved by adjusting the horizontal timebase and/or enlarging the memory depth. Scopes with “deep memory” can store millions of points per waveform at a high sample rate. This increases the horizontal resolution of the acquisition and stores a longer time segment of the waveform.

In **Figure 2** below, we have the same AM input signal and timebase, but we have enabled the long, or deep, memory of the scope. This changes the sample rate to 50MSa/s, and provides much more waveform detail.

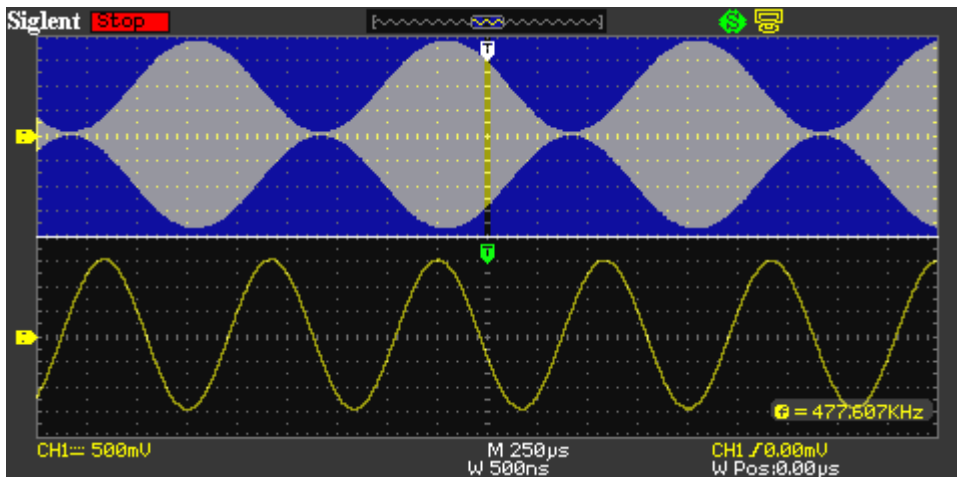


Figure 2: AM modulated input captured with 2Mpt memory depth.

Deep memory provides higher sample rates over longer acquisition times. This can add essential details to data, especially when you are zooming in on specific features.



North American Headquarters

SIGLENT Technologies NA
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglentna.com
www.siglentna.com

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH
Liebigstrasse 2-20, Gebaeude 14,
22113 Hamburg Germany
Tel: +49(0)40-819-95946
Fax: +49(0)40-819-95947
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3688 7876
Fax: + 86 755 3359 1582
sales@siglent.com
www.int.siglent.com