


How to configure the SVA1X for complex impedance measurements


August 21, 2019

The SIGLENT SVA1X series is a multi-purpose RF measurement instrument. This operating tip shows you how to quickly configure the Vector Network mode to show a Smith chart displaying complex impedance:


1. VNA mode – Press Mode > VNA

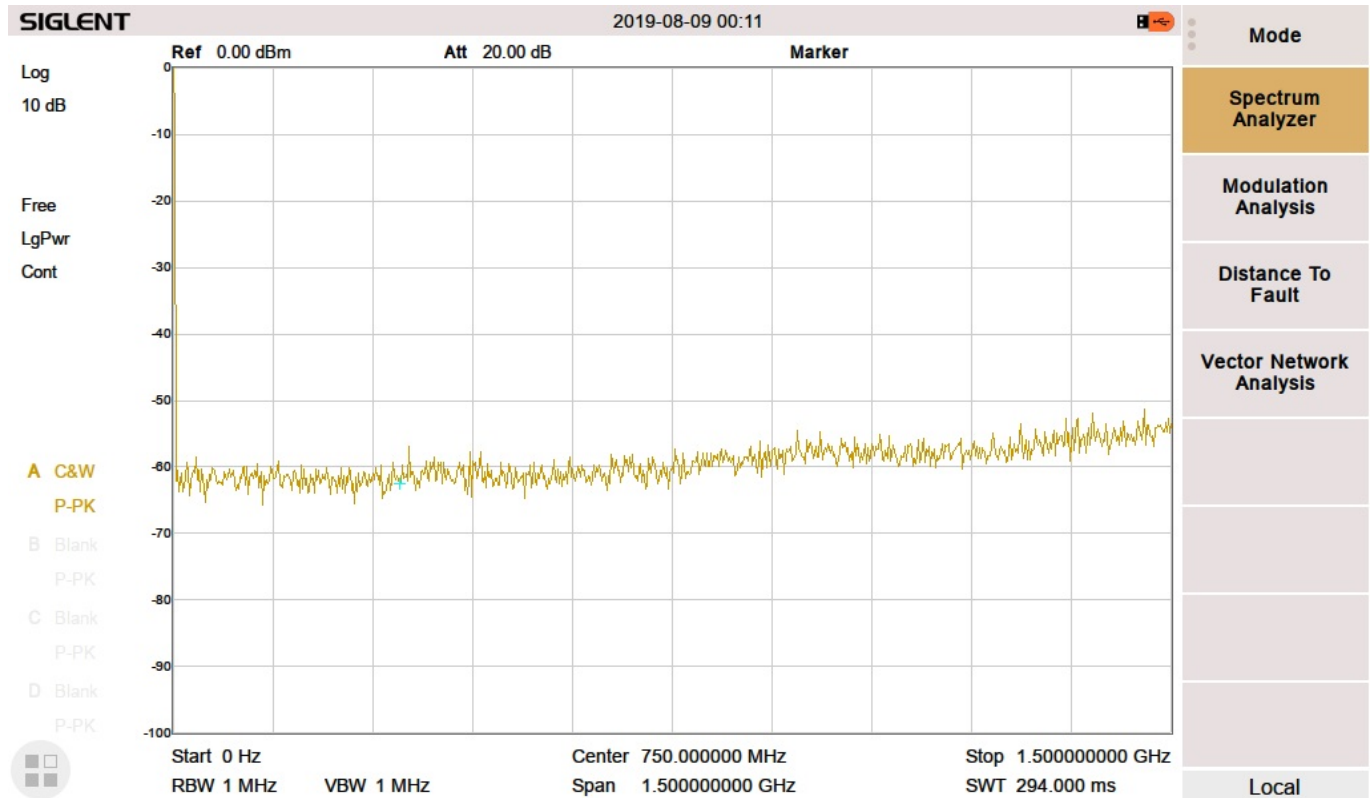


2. Set Meas type as S11 or S21

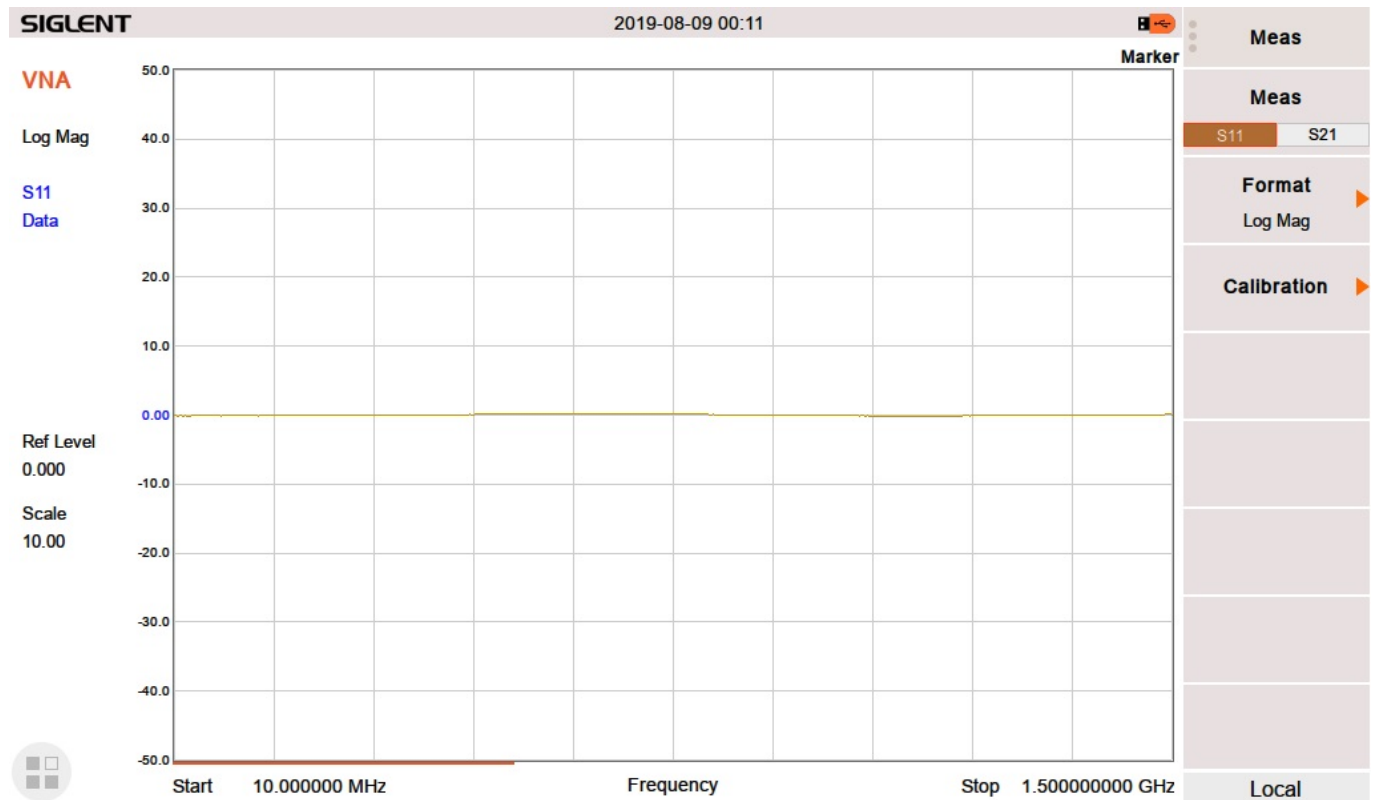


3. Set Format - Smith

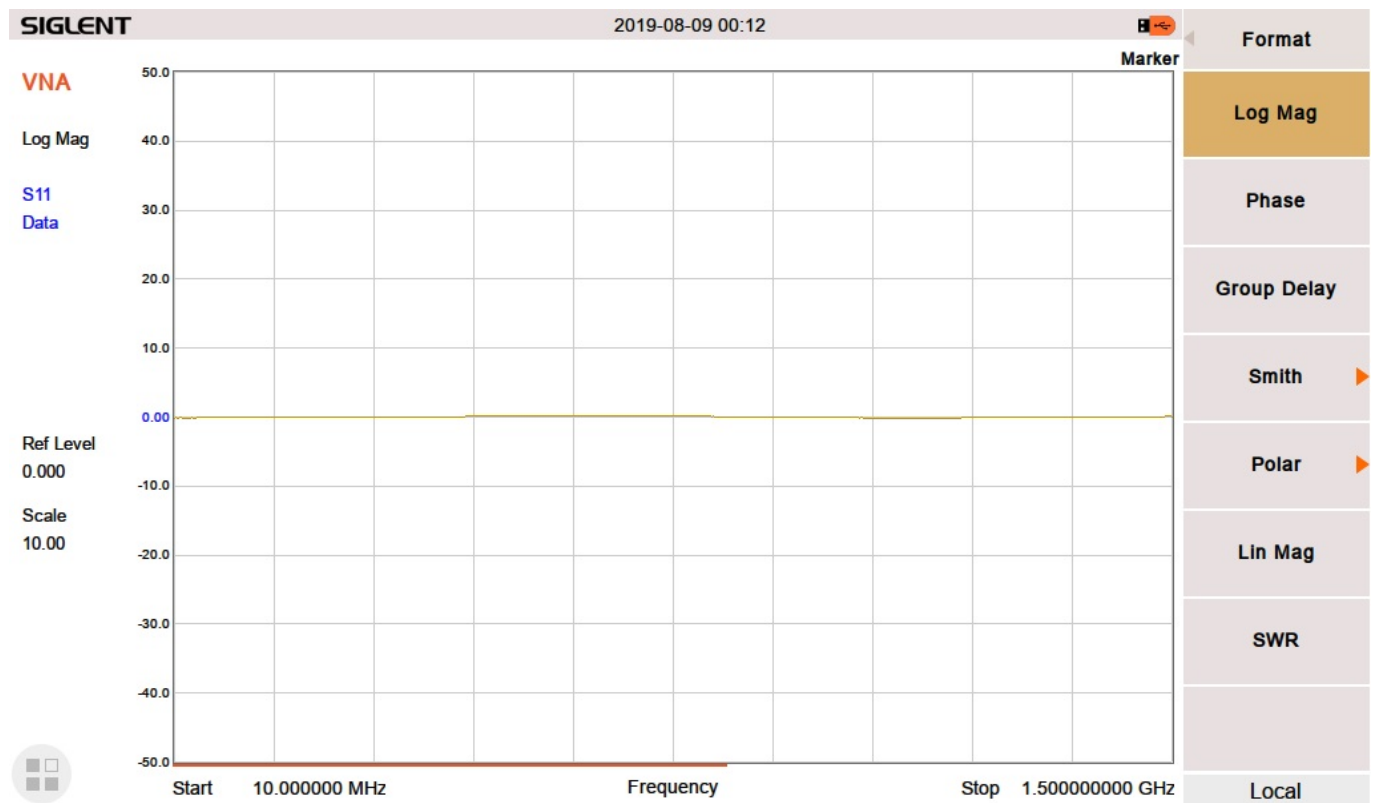

4. Select R + jX

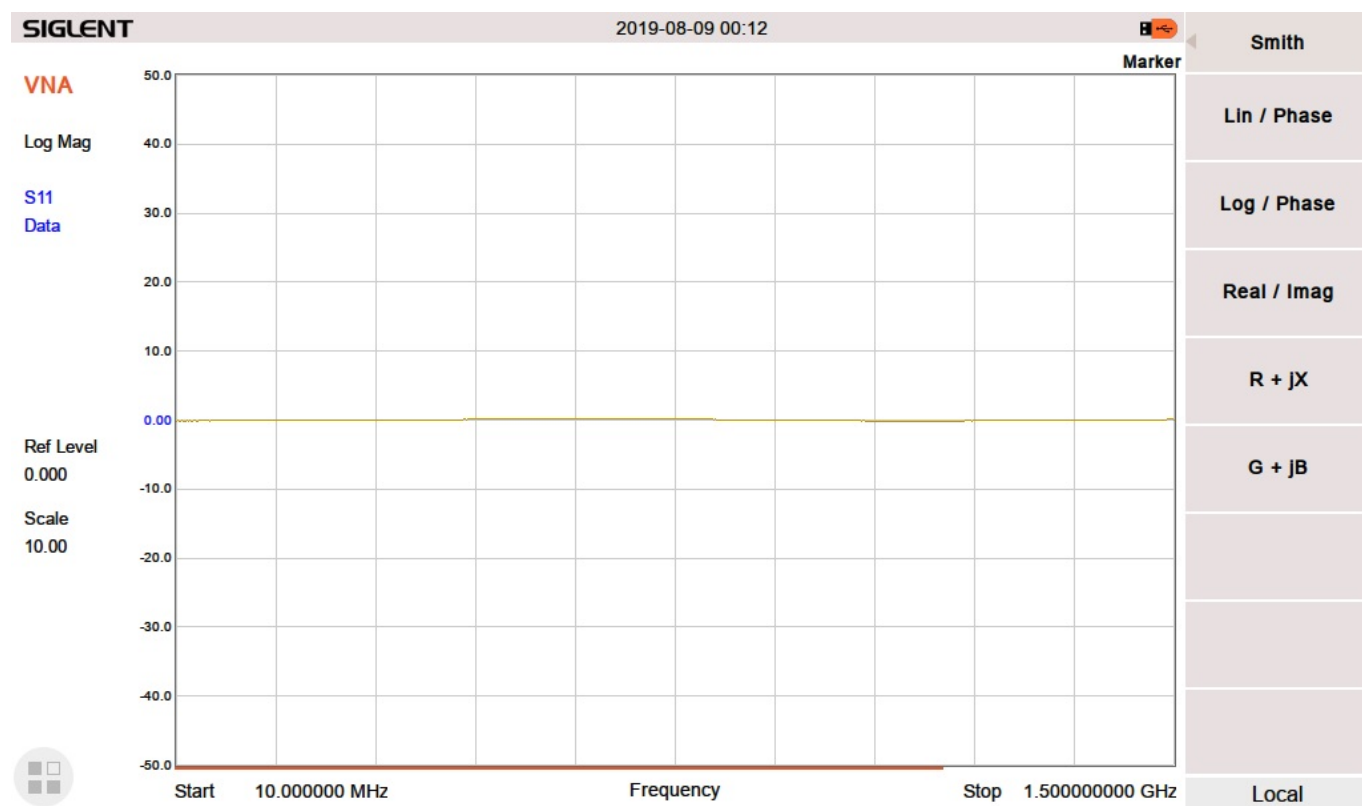

5. Now, you can activate markers (press Marker) and you can adjust the position of the marker on the screen to get the exact reading at that point

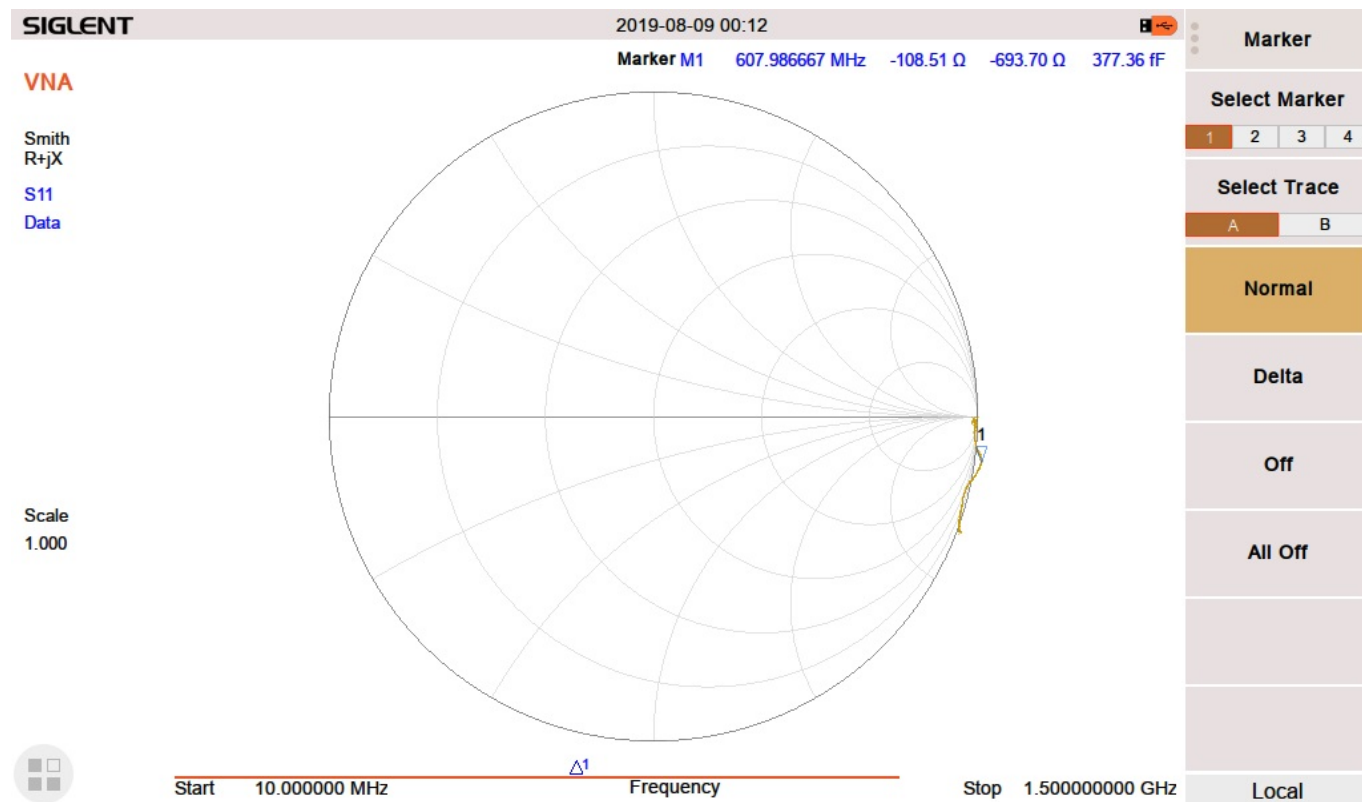



North American Headquarters

SIGLENT Technologies NA
6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free: 877-515-5551
Fax: 440-399-1211
info@siglent.com
www.siglentamerica.com/

European Sales Offices

SIGLENT TECHNOLOGIES GERMANY GmbH
Staetzlinger Str. 70
86165 Augsburg, Germany
Tel: +49(0)-821-666 0 111 0
Fax: +49(0)-821-666 0 111 22
info-eu@siglent.com
www.siglenteu.com

Asian Headquarters

SIGLENT TECHNOLOGIES CO., LTD.
Blog No.4 & No.5, Antongda Industrial Zone,
3rd Liuxian Road, Bao'an District,
Shenzhen, 518101, China.
Tel: + 86 755 3661 5186
Fax: + 86 755 3359 1582
sales@siglent.com
www.siglent.com/ens